



1.25 Gb/s 1310/1550nm PIN – TIA Data Sheet - Rev 0

## **FEATURES**


- 1.25 Gb/s Differential Output TIA
- 5.0V Operation
- Automatic Gain Control
- 75μm 1270-1560nm InGaAs Photodetector
- 1000 MHz Minimum Bandwidth
- -28dBm Typical Sensitivity
- TO-46 Ultra Flat-Window or Lens Package

### **APPLICATIONS**

- Gigabit Ethernet (1.250 Gb/s)
- Fibre channel (1.064 Gb/s)


## PRODUCT DESCRIPTION

The ANADIGICS AMT121302, packaged in a TO46 flat window or lens can, is a 5V integrated photodetector and transimpedance amplifier (TIA) used to convert a long wavelength (1270-1560nm) input optical signal into a differential output voltage, and is manufactured in ANADIGICS' 6" GaAs wafer fabrication facility. The TIA maximizes the

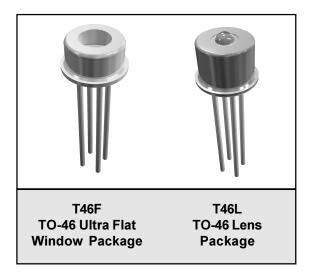

receiver performance by providing a negative voltage to reverse bias the photodetector which allows the device to achieve high sensitivity and wide bandwidth. These products are readily designed into receivers and transceivers for Gigabit Ethernet and Fibre Channel applications.

Figure 1: Block Diagram

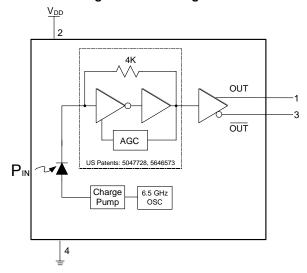

**Table 1: Absolute Maximum Ratings** 

V <sub>DD</sub>	7.0V		
P <sub>IN</sub>	+5dBm		
T <sub>s</sub>	Storage Temp 65 °C to 125 °C		

**Table 2: Electrical Characteristics** 

PARAMETER	MIN	TYP	MAX	UNIT
Wavelength (χ)	1270		1560	nm
Detector Diameter		75		μm
Small Signal Differential (@ 50 MHz) Responsivity (1) For T46F Package For T46L Package	2500 2000	3300		VW
Bandwidth (1)	1000	1100		MHz
Low Frequency Cutoff		800		kHz
Output Resistance	25	40	60	Ω
Output Offset Voltage		2.2		V
Optical Overload (2)	- 3	0		dBm
Optical Sensitivity <sup>(2)</sup> For T46F Package For T46L Package	-26 -25	-28		dBm
Differential Output Voltage (3), (4)		350	600	mV
T <sub>RISE</sub> & T <sub>FALL</sub> ( 20 - 80% ) (3), (4)		160	260	ps
Duty Cycle Distortion (3), (5)		3	6	%
RMS Jitter (3), (5), (6)		15	30	ps
Total Jitter (pk-pk) (3), (5), (7)		90	150	ps
Supply Current		35	50	mA
Operating Voltage Range	+ 4.5	+ 5.0	+ 5.5	V
Operating Ambient Temperature Range	0		70	ç

- Measured at -17 dBm optical input power with a SMF and output connected into R<sub>i</sub> = 100 Ω (differential).
- 2. Measured at  $10^{-10}$  BER with a  $2^7$ -1 PRBS, 1.25 Gb/s.
- 3. Input optical power = -3 dBm,  $R_1$  = 100  $\Omega$  (differential).
- 4. Measured with a 625 MHz, 50% duty cycle square wave.
- 5. Measured with a 1.25 Gb/s, 27-1 PRBS.
- 6. 1σ about the center eye crossing.
- 7. 6σ about the center eye crossing.

Table 3: Package PIN Description

Pin	Description	Comment
1	$V_{\text{OUT}}$ - TIA Output Voltage (non-Inverted)	Logical '1' with optical input
2	V <sub>DD</sub> - Positive Supply Voltage	+5 Volts
3	$\overline{V_{\text{OUT}}}$ - TIA Output Voltage (Inverted)	Logical '0' with optical input
4	Ground	Case is grounded

Figure 2: Frequency Response \*



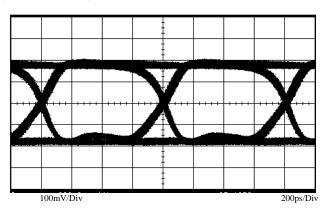


Figure 3: Eye Diagram with an Optical Input Power of -3.0dBm

Frequency (MHz)



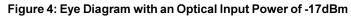


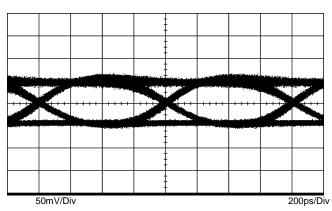

<sup>\*</sup> Calibrated with an optical reference receiver with a gain of 21.62 dB at 50 MHz and a responsively of 11.77462 A/W.

Figure 5: Supply Current vs. Case Temperature

Figure 6: Bandwidth vs. Case Temperature

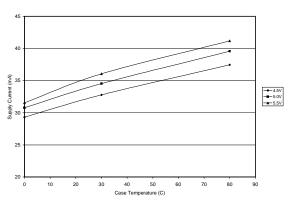

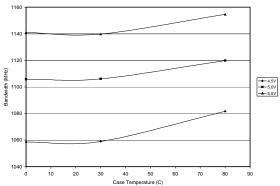


Figure 7: Differential Responsivity vs. Temperature

Figure 8: Sensitivity vs. Case Temperature

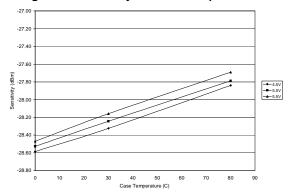


Figure 9: Test Setup for Frequency Response

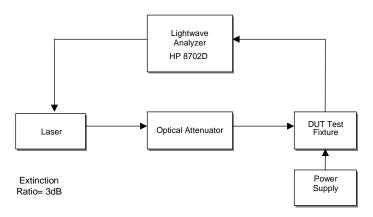


Figure 10: Test Setup for Sensitivity

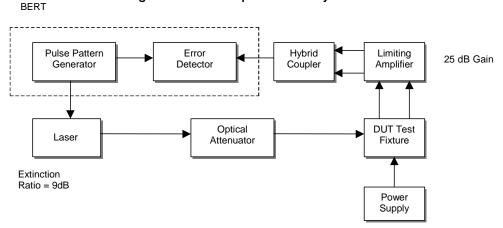


Figure 11: Test Setup for Eye Measurements

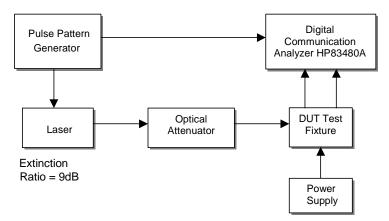


Figure 12: DUT Test Fixture Schematic


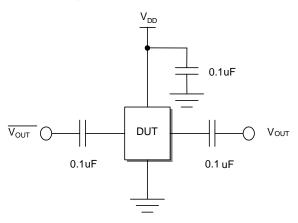


Figure 13: Application Schematic

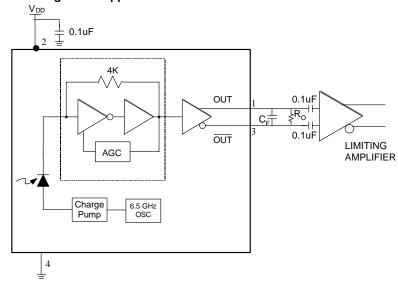

 $C_{\scriptscriptstyle F}$  is an optional single pole noise filter

$$C_F = \frac{1}{2\pi f_c R}$$

 $f_{\!\scriptscriptstyle c}$  is the desired cutoff frequency

$$R = 50 \Omega$$

 $R_{\scriptscriptstyle O}$  is required with high input resistance limiting amplifiers

$$R_{O}$$
 = 100  $\Omega$ 

Figure 14: Evaluation Board Schematic

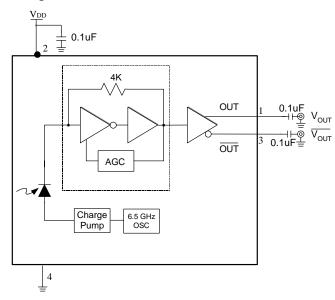


Figure 15: Evaluation Board Layout

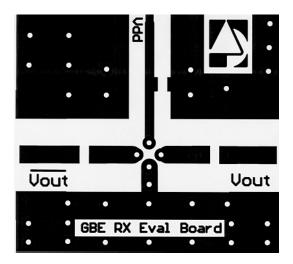


Figure 16: T46F Package Outline Diagram

## TO46-1300nm DIFFERENTIAL FLAT WINDOW


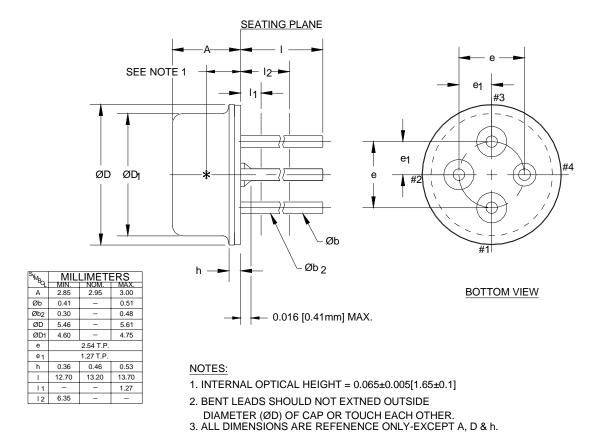


Figure 17: T46L Package Outling Diagram

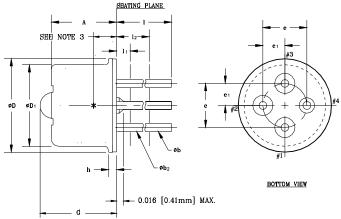

### MM CONTROLLING DIMENSIONS

S <sub>YM</sub> BOL	INC	HES	MILLIMETERS		NOTE
*OL	MIN.	MAX,	MIN.	MAX.	
A		0.160		4.00	
øb	0.016	0.020	0.41	0.51	1
øb2	0.012	0.019	0.30	0.48	1
øD	0.212	0.218	5.38	5.54	
ØD1	0.181	0.187	4.60	4.75	
e	0.100	T.P.	2.54 T.P.		2
e <sub>1</sub>	0.050	T.P.	1.27 T.P.		2
h	0.014	0.022	0.36	0.56	
1	0.500	0.540	12.70	13.70	1
l١	-	0.050	-	1.27	1
l 2	0.250	-	6.35	-	1
d		0.190		4.66	7

#### NOTES:

- 1. (FOUR LEADS) 0b2 APPLIES BETWEEN 11 AND 12. 0b APPLIES BETWEEN 12 AND 0.5 [12.70mm] FROM SEATING PLANE. DIAMETER IS UNCONTROLLED IN 11 AND BEYOND 0.5 [12.70mm] TO END OF PIN.
- BETOND U.S [12.70mm] 10 END OF PIN.

  2. MAXIMUM DIAMETER LEADS AT A GAGING PLANE 0.054

  [1.37mm]+0.001 [0.025mm] -0.000 [0.000mm] BELOW
  SEATING PLANE TO BE WITHIN 0.007 [0.178mm] OF
  THEIR TRUE POSITION RELATIVE TO MAXIMUM—WIDTH TAB
  AND TO THE MAXIMUM 0.212 [5.40mm] DIAMETER
  MEASURED WITH A SUITABLE GAGE. WHEN GASE IS
  NO SEED, WITH A SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH A SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH A SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GASE IS
  NO SEED WITH THE SUITABLE GAGE. WHEN GAT THE SUITABLE GAGE. WHEN GAT THE SUITABLE GAGE. WHEN GAT THE SUITABLE GA
- INTERNAL OPTICAL HEIGHT = 0.052±0.003[1.32±0.08] DIE PLACEMENT ACCURACY FOR REF. ONLY.
- 4. BENT LEADS SHOULD NOT EXTEND OUTSIDE DIAMETER (ØD) OF CAP OR TOUCH EACH OTHER.
- 5. ALL DIMENSIONS ARE REFERENCE ONLY-EXCEPT A, D & h.
- 6. DETECTOR DIODE PLACEMENT ACCURACY: ⊕±0.15MM[0.006]
  ALL DIRECTIONS
- 7. LENS HEIGHT =  $0.65\pm0.1$  [ $0.026\pm0.004$ ]

# **Ordering Information**

Part Number	Package Option	Package Description
AMT121302T46F	TO-46F	Ultra Flat Window Package
AMT121302T46L	TO-46L	Lens Package

# **Notes**





ANADIGICS, Inc.

141 Mount Bethel Road Warren, New Jersey 07059, U.S.A

Tel: +1 (908) 668-5000 Fax: +1 (908) 668-5132

http://www.anadigics.com Mktg@anadigics.com

#### **IMPORTANT NOTICE**

ANADIGICS, Inc. reserves the right to make changes to its products or discontinue any product at any time without notice. The Advanced Product data sheets and product specifications contained in this data sheet are subject to change prior to a products formal introduction. The information in this data sheet has been carefully checked and is assumed to be reliable. However, ANADIGICS assumes no responsibility for inaccuracies. ANADIGICS strongly urges customers to verify that the information they are using is current before placing orders.

#### WARNING

ANADIGICS products are not intended for use in life support appliances, devices, or systems. Use of an ANADIGICS product in any such application without written consent is prohibited.