# Magellan<sup>™</sup> Motion Processor

# MC58000 Electrical Specification

for Brushed Servo, Brushless Servo, Microstepping and Stepping Motion Control

Preliminary



#### NOTICE

This document contains proprietary and confidential information of Performance Motion Devices, Inc., and is protected by federal copyright law. The contents of this document may not be disclosed to third parties, translated, copied, or duplicated in any form, in whole or in part, without the express written permission of PMD.

The information contained in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form, by any means, electronic or mechanical, for any purpose, without the express written permission of PMD.

Copyright 2003 by Performance Motion Devices, Inc. Magellan and C-Motion are trademarks of Performance Motion Devices, Inc

#### Warranty

PMD warrants performance of its products to the specifications applicable at the time of sale in accordance with PMD's standard warranty. Testing and other quality control techniques are utilized to the extent PMD deems necessary to support this warranty. Specific testing of all parameters of each device is not necessarily performed, except those mandated by government requirements.

Performance Motion Devices, Inc. (PMD) reserves the right to make changes to its products or to discontinue any product or service without notice, and advises customers to obtain the latest version of relevant information to verify, before placing orders, that information being relied on is current and complete. All products are sold subject to the terms and conditions of sale supplied at the time of order acknowledgement, including those pertaining to warranty, patent infringement, and limitation of liability.

#### **Safety Notice**

Certain applications using semiconductor products may involve potential risks of death, personal injury, or severe property or environmental damage. Products are not designed, authorized, or warranted to be suitable for use in life support devices or systems or other critical applications. Inclusion of PMD products in such applications is understood to be fully at the customer's risk.

In order to minimize risks associated with the customer's applications, adequate design and operating safeguards must be provided by the customer to minimize inherent procedural hazards.

#### Disclaimer

PMD assumes no liability for applications assistance or customer product design. PMD does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right of PMD covering or relating to any combination, machine, or process in which such products or services might be or are used. PMD's publication of information regarding any third party's products or services does not constitute PMD's approval, warranty or endorsement thereof.

#### MC58000 Electrical Specification – Preliminary 11/13/2003

#### MC50000 Motion Processor User's Guide (MC50000UG)

How to set up and use all members of the MC50000 Motion Processor family.

#### MC50000 Motion Processor Programmer's Command Reference (MC50000PR)

Descriptions of all MC50000 Motion Processor commands, with coding syntax and examples, listed alphabetically for quick reference.

#### MC50000 Motion Processor Electrical Specifications

Three booklets containing physical and electrical characteristics, timing diagrams, pinouts, and pin descriptions of each:

MC55000 Series, for stepping motion control (MC55000ES); MC58000 Series, for brushed and brushless servo, microstepping and stepping motion control (MC58000ES).

#### MC50000 Motion Processor Developer's Kit Manual (DK50000M)

How to install and configure the DK50000 developer's kit PC board.

#### MC58000 Electrical Specification – Preliminary 11/13/2003

# **Table of Contents**

Warranty	iii
Safety Notice	iii
Disclaimer	iii
Related Documents	v
Table of Contents	. vii
1 The MC50000 Family	
1.2 How to Order	. 11
2 Functional Characteristics	12
2.1 Configurations, parameters, and performance	
<ul><li>2.2 Physical characteristics and mounting dimensions</li></ul>	
2.2 Physical characteristics and mounting dimensions	
2.2.1 Of chip	
2.3 Environmental and electrical ratings	
<ul> <li>2.4 MC58110 System configuration – Single chip, 1 axis control</li> </ul>	
2.5 MC58020 System configuration – Two chip, 1 to 4 axis control	
2.6 Peripheral device address mapping.	
3 Electrical Characteristics	. 20
3.1 DC characteristics	. 20
3.2 AC characteristics	. 20
4 I/O Timing Diagrams	. 23
4.1 Clock	
4.2 Quadrature encoder input	
4.3 Reset	-
4.4 Host interface, 8/16 mode	
4.4.1 Instruction write, 8/16 mode	
4.4.2 Data write, 8/16 mode	
4.4.3 Data read, 8/16 mode	
4.4.4 Status read, 8/16 mode	
4.5 Host interface, 16/16 mode	
4.5.1 Instruction write, 16/16 mode	
4.5.2 Data write, 16/16 mode	
4.5.3 Data read, 16/16 mode	
4.5.4 Status read, 16/16 mode	
4.6 External memory timing	
4.6.1 External memory read	
4.6.2 External memory write	
4.7 Peripheral device timing	
4.7.1 Peripheral device read	
4.7.2 Peripheral device write	. 31
5 Pinouts and Pin Descriptions	. 32
5.1 Pinouts for the MC58110	
5.1.1 MC58110 CP chip pin description.	

5.1.2	MC58110 CP chip pin assignment for multiple motor types	
5.2 Pinc	outs for the MC58420	
5.2.1	MC58020 IO chip pin description	
	MC58020 IO chip pin assignment for multiple motor types	
5.2.3	MC58020 CP chip pin description.	
	ernal oscillator filter	

# 1 The MC50000 Family

	MC55020 Series	MC58020 Series	MC55110	MC58110
Number of axes	4,3,2 or 1	4,3,2 or 1	1	1
Number of chips	2 (CP and IO)	2 (CP and IO)	1 (CP)	1 (CP)
Motor type	Stepping	Brushed DC servo Brushless DC servo Stepping	Stepping	Brushed DC servo Brushless DC servo Stepping
Output format	Pulse and direction	Brushed single phase Sinusoidal commutation Microstepping Pulse and direction	Pulse and direction	Brushed single phase Sinusoidal commutation Microstepping Pulse and direction
	С	ommunication interfa	ce	
Parallel	$\checkmark$	√	$\checkmark$	√
Asynchronous serial	$\checkmark$	√	$\checkmark$	√
CAN 2.0B	$\checkmark$	√	$\checkmark$	√
		Position input		
Incremental encoder input	√		√	$\checkmark$
Parallel word device input	√	$\checkmark$	√	$\checkmark$
Index & Home signals	$\checkmark$	$\checkmark$	√	$\checkmark$
Position capture	$\checkmark$	$\checkmark$	$\checkmark$	$\checkmark$
Directional limit switches	√	$\checkmark$	√	$\checkmark$
	Ν	Aotor command outpu	ıt	
PWM output	-	$\checkmark$	-	√
Parallel DAC output	-	$\checkmark$	-	$\checkmark$
SPI DAC output	-	$\checkmark$	-	$\checkmark$
		Trajectory generation	l	
Pulse & direction output	√	$\checkmark$	√	$\checkmark$
Trapezoidal profiling	√	$\checkmark$	√	$\checkmark$
S-curve profiling	√	$\checkmark$	√	√
Velocity profiling	√	$\checkmark$	√	√
Electronic gearing	$\checkmark$	√	$\checkmark$	√
On-the-fly changes	√	$\checkmark$	$\checkmark$	$\checkmark$
		Servo filter		
PID position loop	-	$\checkmark$	-	√
Dual encoder loop	-	$\checkmark$	-	√
Derivative sampling time	-	$\checkmark$	-	$\checkmark$
Feedforward (accel & vel)	-	$\checkmark$	-	$\checkmark$
Dual bi-quad filter	-	√	-	

	MC55020 Series	MC58020 Series	MC55110	MC58110
		Miscellaneous		
Data trace/diagnostics	√	1	√	√
Motion error detection	$\checkmark$ (with encoder)	$\checkmark$	$\checkmark$ (with encoder)	$\checkmark$
Axis settled indicator	$\checkmark$ (with encoder)	$\checkmark$	$\checkmark$ (with encoder)	$\checkmark$
Analog input	$\checkmark$	$\checkmark$	$\checkmark$	$\checkmark$
Programmable bit output	√	$\checkmark$	√	$\checkmark$
Software-invertible signals	√	$\checkmark$	√	$\checkmark$
User-defined I/O	√	$\checkmark$	√	√
External RAM support	√	1	√	$\checkmark$
Multi-chip synchronization	√	$\checkmark$	√	$\checkmark$
Chipset part numbers	MC55120 MC55220 MC55320 MC55420	MC58120 MC58220 MC58320 MC58420	MC55110	MC58110
Developer's Kit p/n's:	DK55420	DK58420	DK55110	DK58110

#### Introduction

This manual describes the operational characteristics of the MC58000 Series Motion Processors from PMD. These devices are members of PMD's third-generation motion processor family.

Each of these devices is a complete chip-based motion processor. They provide trajectory generation and related motion control functions. Depending on the type of motor controlled they provide servo loop closure, on-board commutation for brushless motors, and high-speed pulse and direction outputs. Together these products provide a software-compatible family of dedicated motion processors that can handle a large variety of system configurations.

Each of these chips utilize a similar architecture, consisting of a high-speed computation unit, along with an ASIC (Application Specific Integrated Circuit). The computation unit contains special onboard hardware that makes it well suited for the task of motion control.

Along with similar hardware architecture these chips also share most software commands, so that software written for one series may be re-used with another, even though the type of motor may be different.

#### **Family Summary**


MC55000 Series – These chipsets provide high-speed pulse and direction signals for step motor systems. For the MC55020 series two TQFP ICs are required: a 100-pin Input/Output (IO) chip, and a 144-pin Command Processor (CP) chip, while the MC55110 has all functions integrated into a single chip a 144-pin Command Processor (CP) chip.

**MC58000 Series** – This series outputs motor commands in Sign/Magnitude PWM or DACcompatible format for use with DC-Brush motors or Brushless DC motors having external commutation; two-phase or three-phase sinusoidally commutated motor signals in PWM or DACcompatible format for brushless servo motors; pulse and direction output for step motors; and two phase signals per axis in either PWM or DAC-compatible signals for microstepping motors.

For the MC58020 series two TQFP ICs are required: a 100-pin Input/Output (IO) chip, and a 144-pin Command Processor (CP) chip, while the MC58110 has all functions integrated into a single 144-pin CP chip.

### 1.2 How to Order

When ordering a single-chip configuration, only the CP part number is necessary. For two-IC and multi-axis configurations, both the CP and the IO part numbers are required.

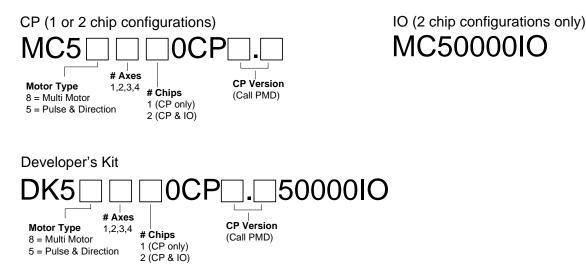

# **2** Functional Characteristics

# 2.1 Configurations, parameters, and performance

Configuration	4 axes (MC58420)				
<b>j</b>	3 axes (MC58320)				
	2 axes (MC58220)				
	1 axis (MC58120 or MC58	110)			
Operating modes	Servo	, ,			
, ,	Closed loop (motor comma	nd is driven from output of servo filter)			
	Open loop (motor comman	d is driven from user-programmed register)			
	Microstepper				
	Open loop (motor comman generator, encoder input us	d is driven from output of trajectory generator & microstep sed for stall detection)			
	Stepper				
	Open loop (pulse generato for stall detection)	r is driven by trajectory generator output, encoder input used			
Communication modes	8/16 parallel 8 bit ex	ternal parallel bus with 16 bit command word size			
	16/16 parallel 16 bit e	external parallel bus with 16 bit command word size			
	Point to point asynchronou	s serial			
	Multi-drop asynchronous se	erial			
	CAN bus 2.0B, protocol co	-exists with CANOpen			
Serial port baud rate range	1,200 baud to 416,667 bau	d			
Profile modes	S-curve point-to-point	Velocity, acceleration, jerk, and position parameters			
	Trapezoidal point-to-point	Velocity, acceleration, deceleration, and position parameters			
	Velocity-contouring	Velocity, acceleration, and deceleration parameters			
	Electronic Gear	Encoder or trajectory position of one axis used to drive a second axis. Master and slave axes and gear ratio parameters			
	External	All commanded profile parameters are generated by the host and stored in external RAM			
Position range	-2,147,483,648 to +2,147,4	183,647 counts steps			
Velocity range	-32,768 to +32,767 counts	steps per cycle			
	with a resolution of 1/65,53	6 counts steps per cycle			
Acceleration and	0 to +32,767 counts steps	per cycle <sup>2</sup>			
deceleration ranges	with a resolution of 1/65,536 counts steps per cycle 2				
Jerk range	0 to 1/2 counts steps per cyc	cle <sup>3</sup>			
		,967,296 counts steps per cycle 3			
Electronic gear ratio range	-32,768 to +32,767 with a r	esolution of 1/65,536 (negative and positive direction)			

Filter modes		dforward + Acceleration feedforward + Bias. Also includes rivative sampling time, output motor command limiting and
	Dual encoder feedback mod compensation	de where auxiliary encoder is used for backlash
Filter parameter resolution	16 bits	
Position error	32 bits	
Position error tracking	Motion error window	Allows axis to be stopped upon exceeding programmable
		window
	Tracking window	Allows flag to be set if axis exceeds a programmable position window
	Axis settled	Allows flag to be set if axis exceeds a programmable position window for a programmable amount of time after trajectory motion is compete
Motor output modes	PWM (10-bit resolution at 20	0 kHz or 8-bit resolution at 80 kHz)
	Parallel DAC-compatible (10	6 bits)
	SPI DAC-compatible (16 bit	s)
	Step and Direction (4.98 Mp	oulses/sec maximum)
Commutation rate	10kHz	
Microstepping waveform	Sinusoidal	
Microsteps per full step	Programmable, 1 to 256	
Maximum encoder rate	Incremental (up to 10 Mcou	
	Parallel-word (up to 160 Mc	ounts/sec)
Parallel encoder word size	16 bits	
Parallel encoder read rate	20 kHz (reads all axes every	
Hall sensor inputs	3 Hall effect inputs per axis	
Cycle/servo loop timing range	51.2 microseconds to 1.048	576 seconds
Minimum cycle/servo loop time	51.2 microseconds	
Multi-chip synchronization		n master and slave servo cycle
Limit switches	2 per axis: one for each dire	
Position-capture triggers	2 per axis: index and home	0
Other digital signals (per	1 AxisIn signal per axis, 1 A	xisOut signal per axis
axis) Software-invertable signals		ex, Home, AxisIn, AxisOut, PositiveLimit, NegativeLimit, idually programmable per axis)
Analog input	8 10-bit analog inputs	
User defined discrete I/O	256 16-bit wide user defined	0/I t
RAM/external memory support	65,536 blocks of 32,768 16 2,147,483,648 16 bit words	bit words per block. Total accessible memory is
Trace modes	one-time	
	continuous	
Maximum number of trace variables	4	
Number of traceable	27	
variables		


Number of host 154 instructions

MC58000 Electrical Specification – Preliminary 11/13/2003

## 2.2 Physical characteristics and mounting dimensions


#### 2.2.1 CP chip

All dimensions are in millimeters.

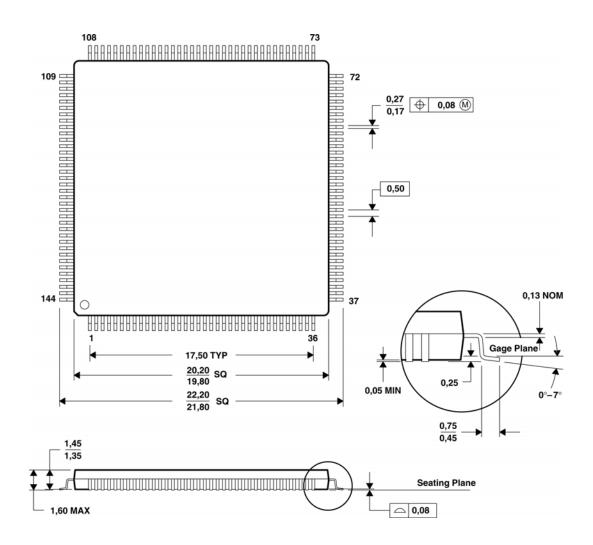

#### 2.2.2 IO chip

All dimensions are in millimeters.

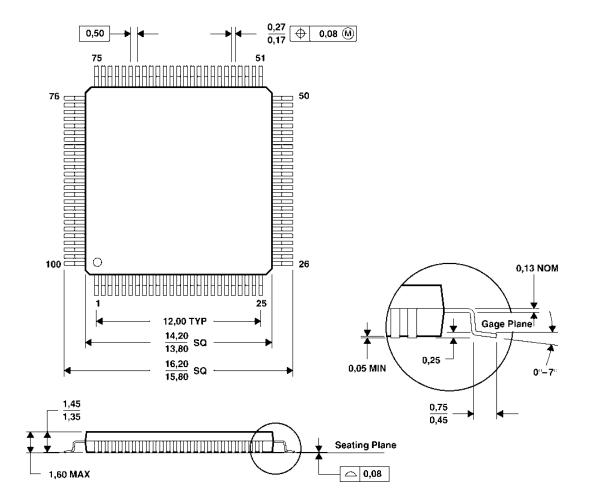


## 2.3 Environmental and electrical ratings

Storage Temperature (Ts)	-65 °C to 150 °C
Operating Temperature: Standard (Ta)	-40 °C to 85 °C*
Operating Temperature: Extended (Ta)	-40 °C to 125 °C*
Power Dissipation (Pa)	CP 445 mW IO 110 mW
Nominal Clock Frequency (Fclk)	40.0 MHz
Supply Voltage limits (Vcc)	-0.3V to +4.6V
Supply Voltage operating range (V $_{cc}$ )	3.0V to 3.6V

## 2.4 MC58110 System configuration – Single chip, 1 axis control

The following figure shows the principal control and data paths in an MC58110 system.

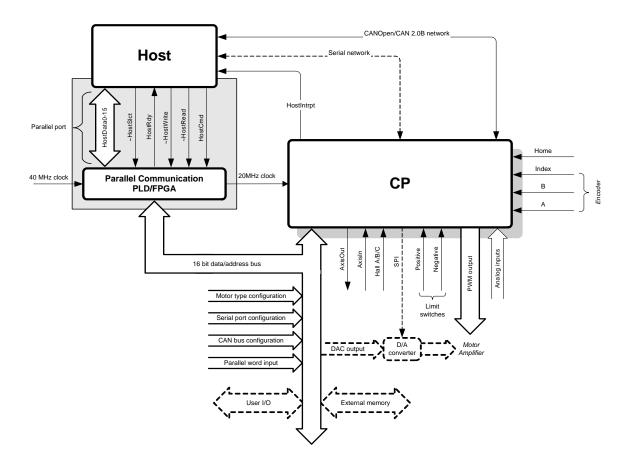

The shaded area shows the CPLD/FPGA that must be provided by the designer if parallel communication is required. A description and the necessary logic (in the form of schematics) of this device are detailed in the section Parallel FPGA section of this manual.

The CP chip is a self-contained motion processor. In addition to handling all system functions, the CP chip contains the profile generator, which calculates velocity, acceleration, and position values for a trajectory. When an axis is configured for servo motor control, a digital servo filter controls the motor output signal. When an axis is configured for microstepping motor control, a commutator controls the motor output signal. In either case, one of three types of output can be generated:


- a Pulse-Width Modulated (PWM) signal output; or
- a DAC-compatible value routed via the data bus to the appropriate D/A converter; or
- a DAC-compatible value routed via the SPI port to the appropriate D/A converter

When an axis is configured for step motor control, the CP chip generates step and direction signals. Axis position information returns to the motion processor in the form of encoder feedback using either the incremental encoder input signals, or via the bus as parallel word input.

The MC58110 can co-exist in a CANOpen network as a slave device. It is CAN 2.0B compliant.

### 2.5 MC58020 System configuration – Two chip, 1 to 4 axis control

The following figure shows the principal control and data paths in an MC58020 system.

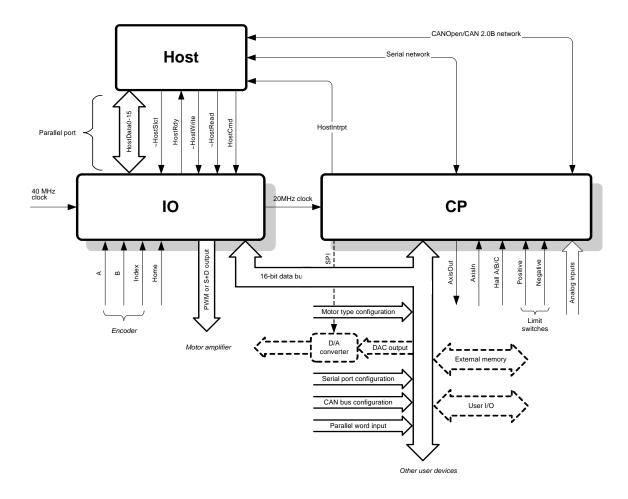

The IO chip contains the parallel host interface, the incremental encoder input along with motor output signals that are configured as PWM or step and direction signals according to the motor type selected for each axis.

The CP chip contains the profile generator, which calculates velocity, acceleration, and position values for a trajectory. When an axis is configured for servo motor control, a digital servo filter controls the motor output signal. When an axis is configured for microstepping motor control, a commutator controls the motor output signal. In either case, one of three types of output can be generated:

- a Pulse-Width Modulated (PWM) signal output; or
- a DAC-compatible value routed via the data bus to the appropriate D/A converter; or
- a DAC-compatible value routed via the SPI port to the appropriate D/A converter

When an axis is configured for step motor control, the IO chip generates the step and direction signals.

Axis position information returns to the motion processor in the form of encoder feedback using either the incremental encoder input signals, or via the bus as parallel word input.

The MC58020 can co-exist in a CANOpen network as a slave device. It is CAN 2.0B compliant.

### 2.6 Peripheral device address mapping

Device addresses on the CP chip's external bus are memory-mapped to the following locations:

Address	Device	Description
0100h	Motor type configuration	Contains the configuration data for the per axis motor type selection
0200h	Serial port configuration	Contains the configuration data (transmission rate, parity, stop bits, etc) for the asynchronous serial port
0400h	CAN port configuration	Contains the configuration data (baud rate and node ID) for the CAN controller
0800h	Parallel-word encoder	Base address for parallel-word feedback devices
1000h	User-defined	Base address for user-defined I/O devices
2000h	RAM page pointer	Page pointer to external memory
4000h	Motor-output DACs	Base address for motor-output D/A converters
8000h	Reserved	

# **3 Electrical Characteristics**

## 3.1 DC characteristics

 $V_{\text{ol}}$ 

(V<sub>cc</sub> and  $T_a$  per operating ratings,  $F_{clk} = 40.0 \text{ MHz}$ )

Logic 0 Output Voltage

Symbol	Parameter	Minimum	Maximum	Conditions
Vcc	Supply Voltage	3.00 V	3.6 V	
l <sub>dd</sub>	Supply Current		135 mA CP 33 mA IO	open outputs

Input Voltages				
Vih	Logic 1 input voltage	2.0 V	Vcc	@CP
Vil	Logic 0 input voltage		0.8 V	@CP
Output Voltages				
Voh	Logic 1 Output Voltage	2.4 V		-2 mA@CP

8 mA@CP

0.4 V

	Other					
lout	Tri-State output leakage current	-2 μA	2 μΑ	@CP		
				$0 < V_{out} < V_{cc}$		
l <sub>in</sub>	Input current	-25 μA	25 µA	@CP		
				$0 < V_i < V_{cc}$		
linclk	Input current, CPClk	-25 μA	25 μΑ	$0 < V_i < V_{cc}$		
Cio	Input/Output capacitance	2/3 pF		@CP typical		

	Analog Input					
Zai	Analog input source impedance		10Ω			
Ednl	Differential nonlinearity error. Difference between the step width and the ideal value.	-1	±2 LSB			
Einl	Integral nonlinearity error. Maximum deviation from the best straight line through the ADC transfer characteristics, excluding the quantization error.		±2 LSB			

## 3.2 AC characteristics

See timing diagrams, Section 4, for Tn numbers. The symbol "~" indicates active low signal.

Timing Interval	Tn	Minimum	Maximum
Clock Frequency (Fclk)		4 MHz	40 MHz <i>(note 1)</i>
Clock Pulse Width	T1	20 nsec	30 nsec
Clock Period (note 3)	T2	50 nsec	250 nsec
Encoder Pulse Width	T3	150 nsec	
Dwell Time Per State	T4	75 nsec	

Timing Interval	Tn	Minimum	Maximum
Index Setup and Hold (relative to Quad A	T5	0 nsec	
and Quad B low)			
~HostSlct Hold Time	T6	0 nsec	
~HostSlct Setup Time	T7	0 nsec	
HostCmd Setup Time	T8	0 nsec	
HostCmd Hold Time	T9	0 nsec	
Read Data Access Time	T10		25 nsec
Read Data Hold Time	T11		10 nsec
~HostRead High to HI-Z Time	T12		20 nsec
HostRdy Delay Time	T13	100 nsec	150 nsec
~HostWrite Pulse Width	T14	70 nsec	
Write Data Delay Time	T15		15 nsec
Write Data Hold Time	T16	0 nsec	
Read Recovery Time (note 2)	T17	60 nsec	
Write Recovery Time <i>(note 2)</i>	T18	60 nsec	
Read Pulse Width	T19	70 nsec	
External Memory Read Timing			
ClockOut low to control valid	T20		4 nsec
ClockOut low to address valid	T21		8 nsec
Address valid to ~ReadEnable low	T22	31 nsec	
ClockOut high to ~ReadEnable low	T23		5 nsec
Data access time from Address valid	T24		40 nsec
Data access time from ~ReadEnable low	T25		31 nsec
Data hold time	T26	0 nsec	
ClockOut low to control inactive	T27		5 nsec
Address hold time after ClockOut low	T28	2 nsec	
ClockOut low to Strobe low	T29		5 nsec
ClockOut low to Strobe high	T30		6 nsec
W/~R low to R/~W rising delay time	T31		5 nsec
External Memory Write Timing			
ClockOut high to control valid	T32		4 nsec
ClockOut high to address valid	T33		10 nsec
Address valid to ~WriteEnable low	T34	29 nsec	
ClockOut low to ~WriteEnable low	T35		6 nsec
Data setup time before ~WriteEnable high	T36	33 nsec	
Data bus driven from ClockOut low	T37	-3 nsec	
Data hold time	T38	2 nsec	
ClockOut high to control inactive	T39		5 nsec
Address hold time after ClockOut low	T40	-5 nsec	
ClockOut low to Strobe low	T41		6 nsec
ClockOut low to Strobe high	T42		6 nsec
R/~W low to W/~R rising delay time	T43		5 nsec
ClockOut high to control valid	T44		6 nsec
		_	
Peripheral Device Read Timing		_	
Address valid to ~ReadEnable low	T22-45	56 nsec	
	T24-46	1	65 nsec
Data access time from Address valid Data access time from ~ReadEnable low	T25-47	_	56 nsec

Timing Interval	Tn	Minimum	Maximum
Peripheral Device Write Timing			
Address valid to ~WriteEnable low	T34-48	54 nsec	
Data setup time before ~WriteEnable high	T36-49	58 nsec	
Device Ready/ Outputs Initialized	T57		1 msec


Device Ready/ Outputs Initialized |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |15/| |1

**Note 2** For 8/16 interface modes only.

Note 3 The clock low/high split has an allowable range of 40-60%.


# 4 I/O Timing Diagrams

For the values of Tn, please refer to the table in Section 3.2.

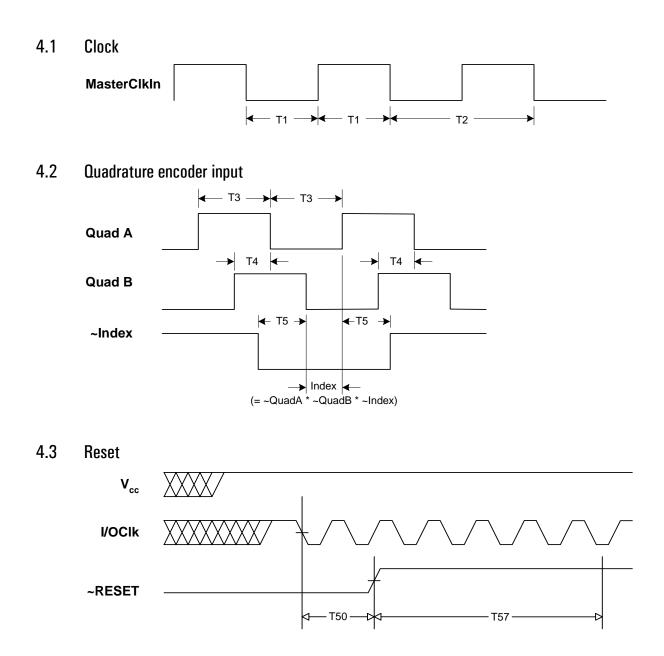


### 4.4 Host interface, 8/16 mode



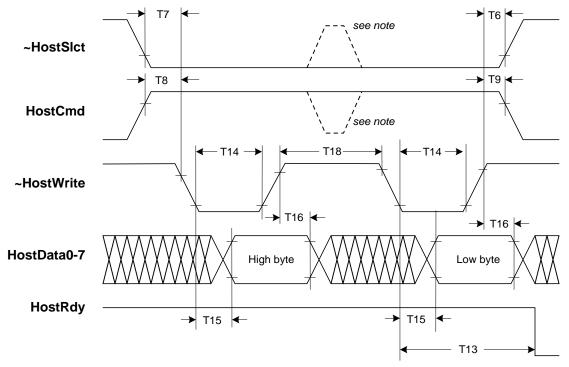

Note: If setup and hold times are met, ~HostSlct and HostCmd may be de-asserted at this point.

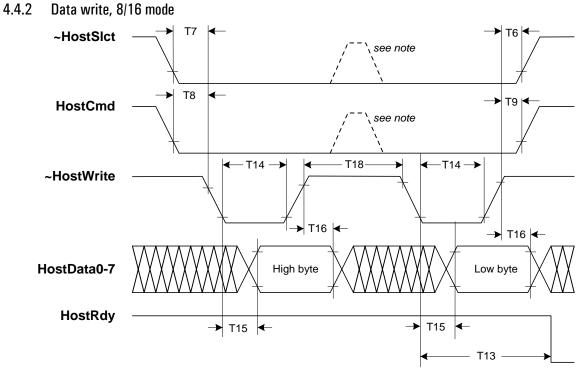


Note: If setup and hold times are met, ~HostSlct and HostCmd may be de-asserted at this point.


MC58000 Electrical Specification – Preliminary 11/13/2003

24


#### 4.4.3 Data read, 8/16 mode

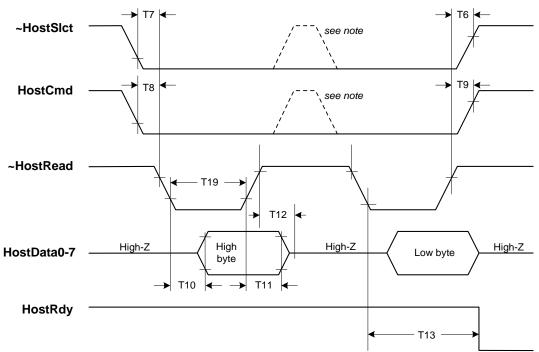


Note: If setup and hold times are met, ~HostSlct and HostCmd may be de-asserted at this point.

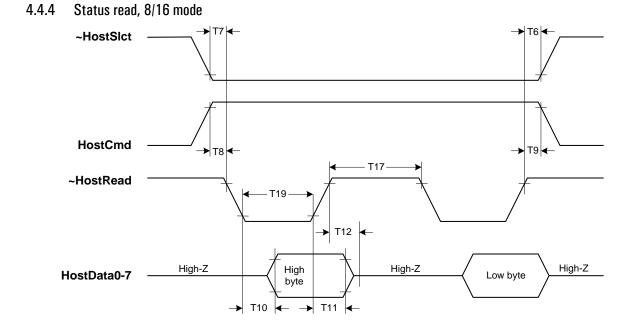

## 4.5 Host interface, 16/16 mode

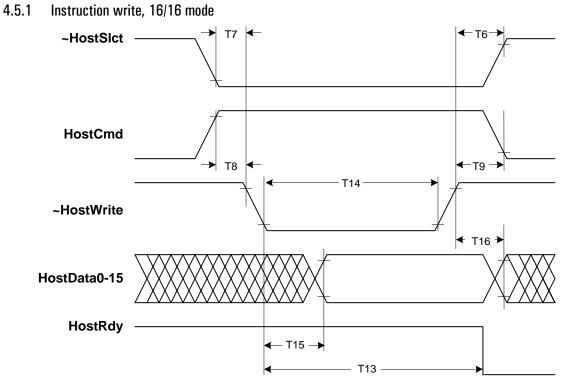



4.5.2 Data write, 16/16 mode

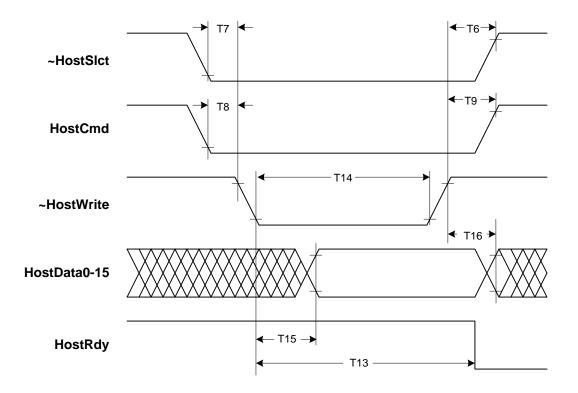


#### MC58000 Electrical Specification – Preliminary 11/13/2003

#### 4.5.3 Data read, 16/16 mode

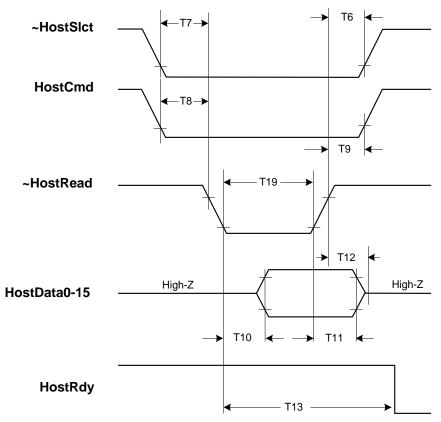

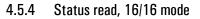


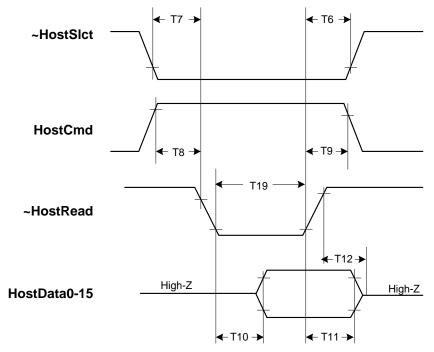


# 4.6 External memory timing

#### 4.6.1 External memory read


Note: PMD recommends using memory with an access time no greater than 15 nsec.

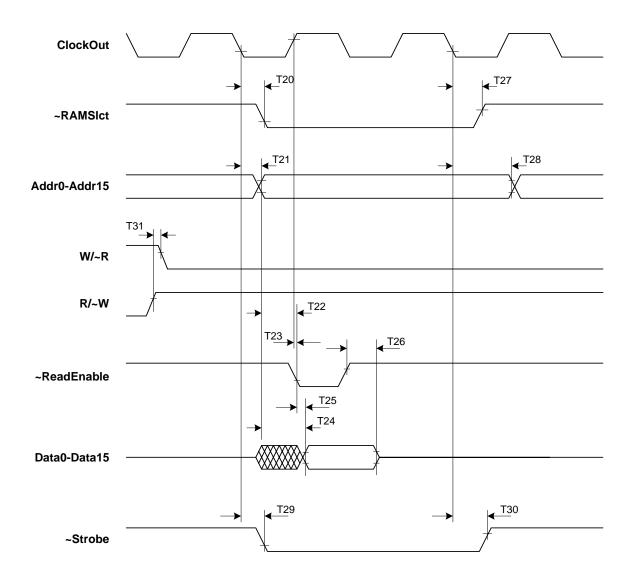


#### 4.6.2 External memory write

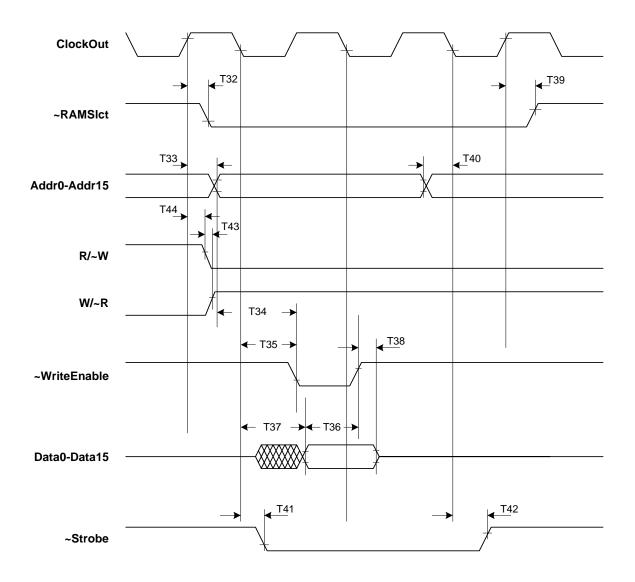

- 4.7 Peripheral device timing
- 4.7.1 Peripheral device read

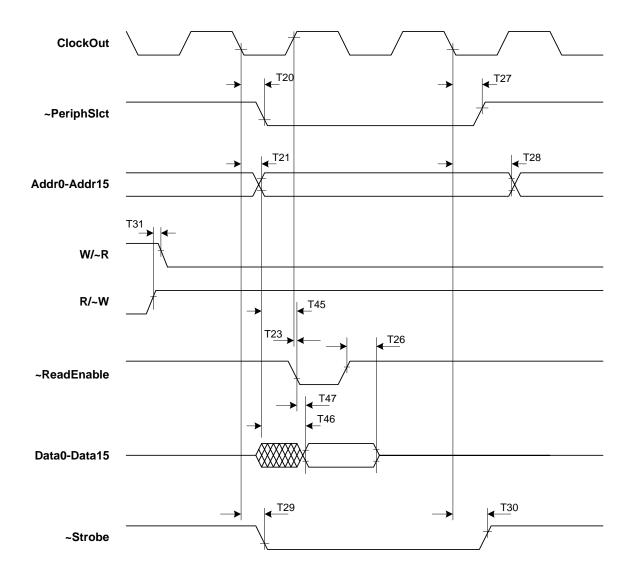


#### 4.7.2 Peripheral device write

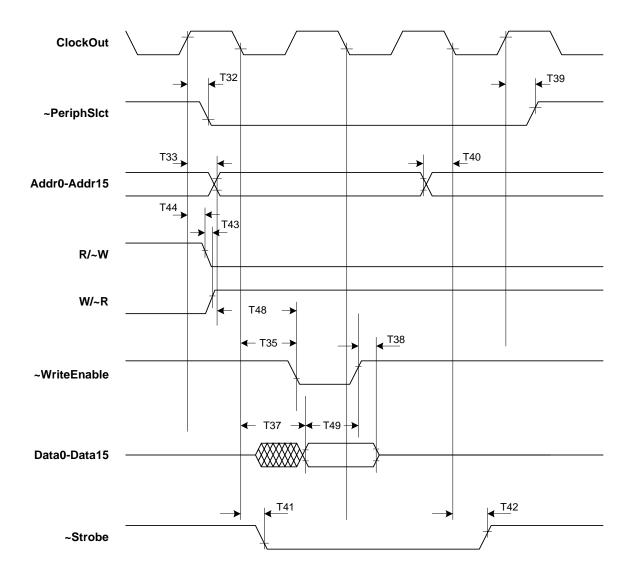

# **5** Pinouts and Pin Descriptions

#### 5.1 Pinouts for the MC58110

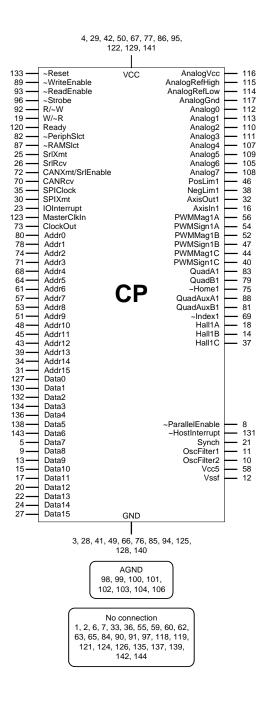

#### 5.1.1 MC58110 CP chip pin description

Pin Name and number		Direction	Description		
~Reset	133	input	This is the master reset signal. When brought <i>low</i> , this pin resets the chipset to its initial conditions.		
~WriteEnable	89	output	This signal is the write-enable strobe. When <i>low</i> , this signal indicates that data is being written to the bus.		
~ReadEnable	93	output	This signal is the read-enable strobe. When <i>low</i> , this signal indicates that data is being read from the bus.		
~Strobe	96	output	This signal is <i>low</i> when the data and address are valid during CP communications. If the parallel interface is used, this pin should be connected to the PLD/FPGA IO chip signal CPStrobe.		
R/~W	92	output	This signal is <i>high</i> when the CP chip is performing a read, and <i>low</i> when it is performing a write. If the parallel interface is used, this pin should be connected to the PLD/FPGA IO chip signal CPR/-W.		
W/~R	19	output	This signal is the inverse of R/-W; it is <i>high</i> when R/-W is low, and vice versa. For some decode circuits and devices this is more convenient than R/-W.		
Ready	120	input	Ready can be pulled low to add wait states for external accesses. Ready indicates that an external device is prepared for a bus transaction to be completed. If the device is not ready, it pulls the Ready pin <i>low</i> . The motion processor then waits one cycle and checks Ready again.		
			This signal can be left unconnected if it is not used.		
~PeriphSlct	82	output	This signal is <i>low</i> when peripheral devices on the data bus are being addressed. If the parallel interface is used, this pin should be connected to the PLD/FPGA IO chip signal CPPeriphSlct.		
~RAMSIct	87	output	This signal is <i>low</i> when external memory is being accessed.		
SrlXmt	25	output	This pin outputs serial data from the asynchronous serial port.		
SrIRcv	26	input	This pin inputs serial data to the asynchronous serial port.		
CANXmt SrlEnable	72	output	<ul><li>When the CAN host interface is used, this pin transmits serial data to the CAN transceiver.</li><li>When the multi-drop serial interface is used, this pin sets the serial port enable line and the CANXmt function is not available. SrlEnable is <i>high</i> during</li></ul>		
0.000	70		transmission for the multi-drop protocol and <i>low</i> at all other times.		
CANRcv	70	output	This pin receives serial data from the CAN transceiver.		
SPIClock	35	output	This pin is the clock signal used for strobing synchronous serial data to the serial DAC(s). This signal is only active when SPI data is being transmitted.		
SPIXmt	30	output	This pin transmits synchronous serial data to the serial DAC(s).		
IOInterrupt	23	input	<ul><li>This interrupt signal is used for IO to CP communication. If the parallel interface is used, this pin should be connected to the PLD/FPGA IO chip signal CPInterrupt.</li><li>This signal can be left unconnected if it is not used.</li></ul>		
MasterClkIn	123	input	This is the clock signal for the Motion Processor. It is driven at a nominal 20MHz.		
ClockOut	73	output	This signal is the reference output clock. Its frequency is twice the frequency of the input clock (which is normally 20MHz) resulting in a nominal output frequency of 40MHz.		

CP

	СР				
Pin Name and number Direction		Direction	Description		
Addr0 Addr1 Addr2 Addr3 Addr4 Addr5 Addr6 Addr7 Addr8 Addr9 Addr10 Addr11 Addr12 Addr13 Addr14 Addr15	80 78 74 71 68 64 61 57 53 51 48 45 43 39 34 31	output	Multi-purpose address lines. These pins comprise the CP chip's external address bus, used to select devices for communication over the data bus. If the parallel interface is used, pins Addr0, Addr1, and Addr15 should be connected to the PLD/FPGA IO chip signals CPAddr0, CPAddr1 and CPAddr15. They are used to communicate between the CP and IO chips. Other address pins may be used for DAC output, parallel word input, or user- defined I/O operations. See the User's Guide for a complete memory map.		
Data0 Data1 Data2 Data3 Data4 Data5 Data6 Data7 Data8 Data9 Data10 Data11 Data12 Data13 Data14 Data15	127 130 132 134 136 138 143 5 9 13 15 17 20 22 24 27	bi-directional	Multi-purpose data lines. These pins comprise the CP chip's external data bus, used for all communications with peripheral devices such as external memory or DACs. They may also be used for parallel-word input and for user-defined I/O operations. If the parallel interface is used, these pins should be connected to the PLD/FPGA IO chip signals CPData0-15.		
AnalogVcc	116	input	Analog input Vcc. This pin should be connected to the analog input supply voltage, which must be in the range $3.0-3.6$ V. If the analog input circuitry is not used, this pin should be tied to V <sub>cc</sub> .		
AnalogRefHigh	115	input	Analog high voltage reference for $A/D$ input. The allowed range is AnalogRefLow to AnalogVcc. If the analog input circuitry is not used, this pin should be tied to $V_{cc}$ .		
AnalogRefLow	114	input	Analog low voltage reference for A/D input. The allowed range is AnalogGND to AnalogRefHigh. If the analog input circuitry is not used, this pin should be tied to GND.		
AnalogGND	117	input	Analog input ground. This pin should be connected to the analog input power supply return. If the analog input circuitry is not used, this pin should be tied to GND.		
Analog0 Analog1 Analog2 Analog3 Analog4 Analog5 Analog6 Analog7	112 113 110 111 107 109 105 108	input	These signals provide general-purpose analog voltage levels which are sampled by an internal A/D converter. The A/D resolution is 10 bits. The allowed signal input range is AnalogRefLow to AnalogRefHigh. Any unused pins should be tied to AnalogGND. If the analog input circuitry is not used, these pins should be tied to GND.		

Pin Name and number		Direction Description			
PosLim1	46	input	This signal provides input from the positive-side (forward) travel limit switch. On power-up or after reset this signal defaults to active <i>low</i> interpretation, but the interpretation can be set to active <i>high</i> interpretation using the <b>SetSignalSense</b> instruction. If this pin is not used it may be left unconnected.		
NegLim1	38	input	This signal provides input from the negative-side (reverse) travel limit switch. On power-up or after reset this signal defaults to active <i>low</i> interpretation, but the interpretation can be set to active <i>high</i> interpretation using the <b>SetSignalSense</b> instruction. If this pin is not used it may be left unconnected.		
AxisOut1	32	output	This pin can be programmed to track the state of any bit in the status registers. If this pin is not used it may be left unconnected.		
AxisIn1	16	input	This pin is a general-purpose input that can also be used as a breakpoint input. If this pin is not used it may be left unconnected.		
PWMMag1A PWMSign1A PWMSign1B PWMSign1B PWMMag1C PWMSign1C	56 54 52 47 44 40	output	<ul> <li>These pins provide the Pulse Width Modulated signals for each phase of the motor. The PWM resolution is 10 bits at a frequency of 20.0 KHz or 80kHz, selectable via the host command SetPWMFrequency.</li> <li>In 2 or 3-phase PWM 50/50 mode, PWMMag1A/1B/1C are the only signals and encode both the magnitude and direction in the one signal.</li> <li>In single-phase PWM sign/magnitude mode, PWMMag1A and PWMSign1A are the PWM magnitude and direction signals respectively.</li> </ul>		
			<ul> <li>In 2-phase PWM sign/magnitude mode, PWMMag1A and PWMSign1A are the PWM magnitude and direction signals for Phase A. PWMMag1B and PWMMag1B are the PWM magnitude and direction signals for Phase B.</li> <li>Unused pins should be left unconnected.</li> <li>Refer to the User's Guide for more information on PWM encoding schemes.</li> </ul>		
SPIEnable1	54	output	<ul> <li>This pin provides the enable signal when SPI DAC output is active. The enable is <i>high</i> when the DAC channel is being written to. At all other times the signal is <i>low</i>.</li> <li>SPI output can only be used when the axis being controlled is DC brushed or when the amplifier expects a single-phase input and it performs brushless motor commutation. PWM and Step and Direction output is not available when SPI DAC output is selected.</li> <li>If this pin is not used it may be left unconnected.</li> </ul>		
Pulse1	56	output	This pin provides the pulse (step) signal to the motor. A step occurs when the signal transitions from a <i>high</i> to a <i>low</i> state. This default behavior can be changed to a <i>low</i> to <i>high</i> state transition using the command <b>SetSignalSense</b> . If this pin is not used it may be left unconnected.		
Direction1	54	output	This pin indicates the direction of motion and works in conjunction with the pulse signal. A <i>high</i> level on this signal indicates a positive direction move and a <i>low</i> level indicates a negative direction move.		
AtRest1	52	output	This signal indicates that the axis is at rest and the step motor can be switched to low power or standby mode. A <i>high</i> level on this signal indicates the axis is at rest while a <i>low</i> signal indicates the axis is in motion.		

Pin Name and number		Direction Description				
QuadA1 QuadB1	83 79	input	These pins should be connected to the A and B quadrature signals from the incremental encoder. When the axis is moving in the positive (forward) direction, signal A leads signal B by 90°. The theoretical maximum encoder pulse rate is 5.0 MHz. Actual maximum rate will vary, depending on signal noise. <b>NOTE</b> : Many encoders require a pull-up resistor on each signal to establish a proper high signal. Check your encoder's electrical specification. If these pins are not used they may be left unconnected.			
~Home1	75	input	This pin provides the home signal, a general-purpose input to the position capture mechanism. A valid home signal is recognized by the motion processor when ~Home transitions from <i>high</i> to <i>low</i> . If this pin is not used it may be left unconnected.			
QuadAuxA1 QuadAuxB1 ~Index1	88 81 69	input	If index capture is required, the encoder A and B signals connected to QuadA1 and QuadB1 signals must also be connected to QuadAuxA1 and QuadAuxB1. The index pin should be connected to the index signal from the incremental encoder. A valid index pulse is recognized by the motion processor when this signal transitions from <i>high</i> to <i>low</i> . If these pins are not used they may be left unconnected.			
			WARNING! There is no internal gating of the index signal with the encoder A and B inputs. This must be performed externally it desired. Refer to the Application Notes section at the end of this manual for an example.			
Hall1A Hall1B Hall1C	18 14 37	input	<ul> <li>Hall sensor inputs. These signals encode 6 valid states as follows: A on, A and B on, B on, B and C on, C on, C and A on. A sensor is defined as being on when its signal is <i>high</i>. On power-up or after reset these signal defaults to active <i>high</i> interpretation, but the interpretation can be set to active <i>low</i> interpretation using the SetSignalSense instruction.</li> <li>Note: These signals should only be connected to Hall sensors that are mounted at a 120° offset. Motors with hall signals 60° apart will not work.</li> <li>The number of available axes determines which of these signals are valid. If these pins are not used they may be left unconnected.</li> </ul>			
ParallelEnable 8	8	input	This signal enables/disables the parallel communication with the host. If this signal is tied <i>high</i> , the parallel interface is enabled. If this signal is tied <i>low</i> the parallel interface is disabled. Contact PMD for more information on parallel communication.			
			WARNING! This signal should only be tied high if an external logic device that implements the parallel communication logic is included in the design.			
~HostInterrupt	131	output	When <i>low</i> , this signal causes an interrupt to be sent to the host processor.			
Synch	21	input/output	This pin is the synchronization signal. In the disabled mode, the pin is configured as an input and is not used. In the master mode, the pin outputs a synchronization pulse that can be used by slave nodes or other devices to synchronize with the internal chip cycle of the master node. In the slave mode, the pin is configured as an input and should be connected to the Synch pin on the master node. A pulse on the pin synchronizes the internal chip cycle to the signal provided by the master node. If this pin is not used it may be left unconnected.			
OscFilter1 OscFilter2	11 10		These signals connect to the external oscillator filter circuitry. Section 5.3 shows the required filter circuitry.			

CP

Pin Name and	number	Direction	Description
V <sub>cc5</sub>	58		This signal can optionally be tied to a 5V logic supply, which is required for reprogramming the chipset firmware.
Vssf	12		This signal must be tied to pin 28 using a bypass capacitor. A ceramic capacitor with a value between $0.1\mu$ F and $0.01\mu$ F should be used.
Vcc	4, 29, 42, 50, 67, 77, 86, 95, 122, 129, 141		CP digital supply voltage. All of these pins must be connected to the supply voltage. $V_{cc}$ must be in the range $3.0 - 3.6$ V.
GND	3, 28, 41, 49, 66, 76, 85, 94, 125, 128, 140		CP digital supply ground. All of these pins must be connected to the digital power supply return.
AGND	98, 99, 100, 101, 102, 103, 104, 106		These signals must be tied to AnalogGND. If the analog input circuitry is not used, these pins must be tied to GND.
No connection	59, 60, 90, 91, 121, 12	7, 33, 36, 55, 62, 63, 65, 84, 97, 118, 119, 24, 126, 135, 99, 142, 144	These signals must be left unconnected.

CP

## 5.1.2 MC58110 CP chip pin assignment for multiple motor types

The MC58110 chip supports outputting PWM motor commands in sign/magnitude and 50/50 modes. For stepping motors it can also output step and direction signals. The CP chip assigns pin function according to the selected output mode.

If the output mode is set to	• PWM sign/magnitud	• the following	pipout should be used
If the output mode is set of	0 I whi sign/ magintuu	, the ronowing	philout should be used.

PWMMag1A PWMMag1B	56 52	output	These pins provide the Pulse Width Modulated signal to the motor. In PWM 50/50 mode, this is the only signal. In PWM sign-magnitude mode, this is the magnitude signal.
PWMSign1A	54	output	In PWM sign-magnitude mode, these pins provide the sign (direction) of
PWMSign1B	47		the PWM signal to the motor amplifier.

#### If the output mode is set to **PWM 5050**, the following pinout should be used.

PWMMag1A56PWMMag1B52PWMMag1C44	•	These pins provide the Pulse Width Modulated signals for each phase to the motor. If the number of phases is 2, only phase A and B are valid. If the number of phases is 3, phases A,B and C are valid. The number of phases is set using the command <b>SetNumberPhases</b> . In PWM 50/50 mode, these are the only signals.
--------------------------------	---	---


If the output mode is set to **Step and Direction**, the following pinout should be used.

1		1	, 01
Pulse1	56	output	This pin provides the pulse (step) signal to the motor.
Direction1	54	output	These pin indicates the direction of motion and works in conjunction with the pulse signal.
AtRest1	52	output	This signal indicates the axis is at rest and the step motor can be switched to low power or standby mode.

If the output mode is set to SPI DAC, the following pinout should be used.

1			, 01
SPIEnable1	54	output	This pin provides the enable signal when SPI DAC output is active.

## 5.2 Pinouts for the MC58420

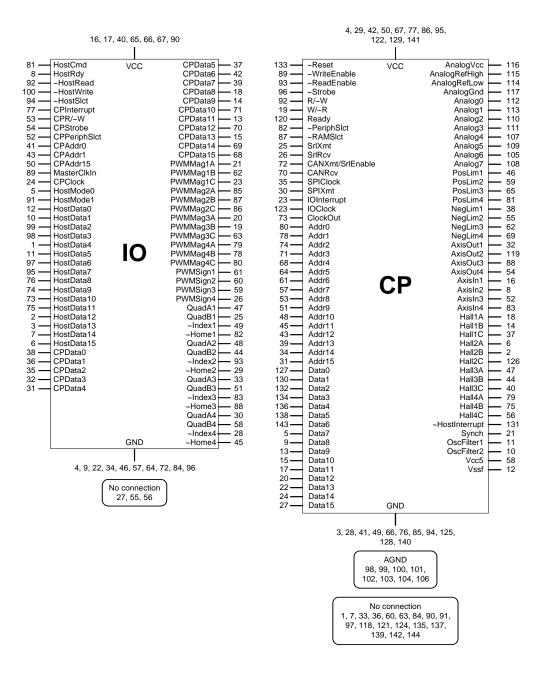

# 5.2.1 MC58020 IO chip pin description

10

Pin Name and Number		Direction	Description           This signal is asserted <i>high</i> to write a host instruction to the motion processor, or to read the status of the HostRdy and HostInterrupt signals. It is asserted <i>low</i> to read or write a data word.	
HostCmd	81 input			
HostRdy	8	output	This signal is used to synchronize communication between the motion processor and the host. HostRdy (HostReady) will go <i>low</i> indicating host port busy at the end of a read or write operation according to the interface mode in use, as follows:Interface Mode HostRdy goes <i>low</i> 8/16after the second byte of the instruction word	
			16/16after the second byte of each data word is transferred16/16after the 16-bit instruction wordafter each 16-bit data word	
			<ul> <li>HostRdy will go <i>high</i>, indicating that the host port is ready to transmit, when the last transmission has been processed. All host port communications must be made with HostRdy <i>high</i> (ready).</li> <li>A typical busy-to-ready cycle is 10 microseconds, but can be substantially longer, up to 50 microseconds.</li> </ul>	
~HostRead	92	input	When -HostRead is <i>low</i> , a data word is read from the motion processor.	
~HostWrite	100	input	When -HostWrite is <i>low</i> , a data word is written to the motion processor.	
~HostSlct	94	input	When -HostSlct is <i>low</i> , the host port is selected for reading or writing operations.	
CPInterrupt	77	output	IO chip to CP chip interrupt. It should be connected to CP chip pin 23, IOInterrupt.	
CPR/~W	53	input	This signal is <i>high</i> when the CP chip is reading data from the IO chip, and <i>low</i> when it is writing data. It should be connected to CP chip pin 92, R/-W.	
CPStrobe	54	input	This signal goes <i>low</i> when the data and address become valid during motion processor communication with peripheral devices on the data bus, such as external memory or a DAC. It should be connected to CP chip pin 96, ~Strobe.	
CPPeriphSlct	52	input	This signal goes <i>low</i> when a peripheral device on the data bus is being addressed. It should be connected to CP chip pin 82, ~PeriphSlct.	
CPAddr0 CPAddr1 CPAddr15	41 43 50	input	These signals are <i>high</i> when the CP chip is communicating with the IO chip (as distinguished from any other device on the data bus). They should be connected to CP chip pins 80 (Addr0), 78 (Addr1), and 31 (Addr15).	
MasterClkIn	89	input	This is the master clock signal for the motion processor. It is driven at a nominal 40 MHz	
CPClock	24	output	This signal provides the clock pulse for the CP chip. Its frequency is hal that of MasterClkIn (pin 89), or 20 MHz nominal. It is connected directly to the CP chip IOClock signal (pin 123).	
HostMode0 HostMode1	5 91	input	These two signals determine the host communications mode, as follows:HostMode1HostMode00016/16 parallel (16-bit bus, 16-bit instruction)01not used108/16 parallel (8-bit bus, 16-bit instruction)11Parallel disabled	

			10
Pin Name and	Number	Direction	Description
HostData0 HostData1 HostData2 HostData3 HostData4 HostData5 HostData6 HostData7 HostData8 HostData9 HostData10 HostData11 HostData12 HostData13 HostData14 HostData15	12 10 99 98 1 11 97 95 76 74 73 75 2 3 7 6	bi-directional, tri-state	These signals transmit data between the host and the motion processor through the parallel port. Transmission is mediated by the control signals ~HostSelect, ~HostWrite, ~HostRead and HostCmd. In 16-bit mode, all 16 bits are used (HostData0-15). In 8-bit mode, only the low-order 8 bits of data are used (HostData0-7). The HostMode0 and HostMode1 signals select the communication mode this port operates in.
CPData0 CPData1 CPData1 CPData2 CPData3 CPData4 CPData5 CPData6 CPData7 CPData8 CPData9 CPData10 CPData11 CPData12 CPData13 CPData14 CPData15	38 36 35 32 31 37 42 39 18 14 71 13 70 15 69 68	bi-directional	These signals transmit data between the IO chip and pins Data0-15 of the CP chip.
PWMMag1A PWMMag1B PWMMag1C PWMSign1A	68 21 62 23 61	output	<ul> <li>These pins provide the Pulse Width Modulated signals for each phase of the motor. The PWM resolution is 10 bits at a frequency of 20.0 KHz or 80kHz, selectable via the host command SetPWMFrequency. These pins control Axis 1.</li> <li>In 2 or 3-phase PWM 50/50 mode, PWMMag1A/1B/1C are the only signals and encode both the magnitude and direction in the one signal.</li> <li>In single-phase PWM sign/magnitude mode, PWMMag1A and PWMSign1A are the PWM magnitude and direction signals respectively.</li> <li>In 2-phase PWM sign/magnitude mode, PWMMag1A and PWMSign1A are the PWM magnitude and direction signals for Phase A. PWMMag1B and PWMMag1C, "PWMSign1B", are the PWM magnitude and direction signals for Phase B.</li> <li>The number of available axes determines which of these signals are valid. Unused pins should be left unconnected.</li> <li>Refer to the User's Guide for more information on PWM encoding schemes.</li> </ul>

Pin Name and	Number	Direction	Description
PWMMag2A PWMMag2B	85 87	output	These pins control Axis 2.
PWMMag2C PWMSign2A	86 60		In 2 or 3-phase PWM 50/50 mode, PWMMag2A/2B/2C are the only signals and encode both the magnitude and direction in the one signal.
			In single-phase PWM sign/magnitude mode, PWMMag2A and PWMSign2 are the PWM magnitude and direction signals respectively.
			In 2-phase PWM sign/magnitude mode, PWMMag2A and PWMSign2A are the PWM magnitude and direction signals for Phase A. PWMMag2B and PWMMag2C, "PWMSign2B", are the PWM magnitude and direction signals for Phase B.
			The number of available axes determines which of these signals are valid. Unused or invalid pins should be left unconnected.
PWMMag3A	20 19	output	These pins control Axis 3.
PWMMag3B PWMMag3C PWMSign3A	63 59		In 2 or 3-phase PWM 50/50 mode, PWMMag3A/3B/3C are the only signals and encode both the magnitude and direction in the one signal.
			In single-phase PWM sign/magnitude mode, PWMMag3A and PWMSign3A are the PWM magnitude and direction signals respectively.
			In 2-phase PWM sign/magnitude mode, PWMMag3A and PWMSign3A are the PWM magnitude and direction signals for Phase A. PWMMag3B and PWMMag3C, "PWMSign3B", are the PWM magnitude and direction signals for Phase B.
			The number of available axes determines which of these signals are valid. Unused or invalid pins should be left unconnected.
PWMMag4A	79 78 80 26	output	These pins control Axis 4.
PWMMag4B PWMMag4C PWMSign4A			In 2 or 3-phase PWM 50/50 mode, PWMMag4A/4B/4C are the only signals and encode both the magnitude and direction in the one signal.
			In single-phase PWM sign/magnitude mode, PWMMag4A and PWMSign4A are the PWM magnitude and direction signals respectively.
			In 2-phase PWM sign/magnitude mode, PWMMag4A and PWMSign4A are the PWM magnitude and direction signals for Phase A. PWMMag4B and PWMMag4C, "PWMSign4B", are the PWM magnitude and direction signals for Phase B.
			The number of available axes determines which of these signals are valid. Unused or invalid pins should be left unconnected.

Pin Name and	l Number	Direction	Description
SPIEnable1 SPIEnable2 SPIEnable3 SPIEnable4	21 85 20 79	output	<ul> <li>These pins provide the enable signal when SPI DAC output is active.</li> <li>Each enable is <i>high</i> when the specific DAC channel is being written to.</li> <li>At all other times the signals are <i>low</i>.</li> <li>There is one signal per axis. SPI output can only be used when the axis being controlled is DC brushed or when the amplifier expects a single-phase input and it performs brushless motor commutation.</li> <li>The number of available axes determines which of these signals are valid. Unused or invalid pins should be left unconnected.</li> </ul>
Pulse1 Pulse2 Pulse3 Pulse4	21 85 20 79	output	<ul> <li>These pins provide the pulse (step) signal to the motor. This signal is always a square wave, regardless of the pulse rate. A step occurs when the signal transitions from a high state to a low state. This default behavior can be changed to a low to high state transition using the command SetSignalSense.</li> <li>The number of available axes determines which of these signals are valid. Invalid axis pins may be left unconnected.</li> </ul>
Direction1 Direction2 Direction3 Direction4	61 60 59 26	output	<ul> <li>These pins indicate the direction of motion and work in conjunction with the pulse signal. A high level on this signal indicates a positive direction move and a low level indicates a negative direction move.</li> <li>The number of available axes determines which of these signals are valid. Invalid axis pins may be left unconnected.</li> </ul>
AtRest1 AtRest2 AtRest3 AtRest4	23 86 63 80	output	The AtRest signal indicates the axis is at rest and the step motor can be switched to low power or standby. A high level on this signal indicates the axis is at rest. A low signal indicates the axis is in motion. The number of available axes determines which of these signals are valid. Invalid axis pins may be left unconnected.
QuadA1 QuadB1 QuadA2 QuadB2 QuadA3 QuadB3 QuadA4 QuadB4	47 25 48 44 33 51 30 58	input	<ul> <li>These pins provide the A and B quadrature signals for the incremental encoder for each axis. When the axis is moving in the positive (forward) direction, signal A leads signal B by 90°.</li> <li>The theoretical maximum encoder pulse rate is 10.2 MHz. Actual maximum rate will vary, depending on signal noise.</li> <li><b>NOTE</b>: Many encoders require a pull-up resistor on each signal to establish a proper high signal. Check your encoder's electrical specification.</li> <li>The number of available axes determines which of these signals are valid.</li> <li><b>WARNING! If a valid axis pin is not used, its signal should be tied high.</b></li> <li>Invalid axis pins may be left unconnected or connected to ground.</li> </ul>
~Index1 ~Index2 ~Index3 ~Index4	49 93 83 28	input	These pins provide the Index quadrature signals for the incremental encoders. A valid index pulse is recognized by the chipset when ~Index, A, and B are all <i>low</i> .         The number of available axes determines which of these signals are valid.
			WARNING! If a valid axis pin is not used, its signal should be tied high.

	10			
Pin Name and	Number	Direction	Description	
~Home1 ~Home2 ~Home3 ~Home4	82 29 88 45	input	These pins provide the Home signals, general-purpose inputs to the position-capture mechanism. A valid Home signal is recognized by the chipset when ~Home <i>n</i> goes <i>low</i> . These signals are similar to ~Index, but are not gated by the A and B encoder channels. The number of available axes determines which of these signals are valid.	
			WARNING! If a valid axis pin is not used, its signal should be tied high.	
			Invalid axis pins may be left unconnected or connected to ground.	
Vcc	16, 17, 4 90	40, 65, 66, 67,	All of these pins must be connected to the IO chip digital supply voltage, which should be in the range 3.0 to 3.6 V.	
GND	4, 9, 22, 34, 46, 57, 64, 72, 84, 96		IO chip ground. All of these pins must be connected to the digital power supply return.	
Not connected	27, 55, 56		These pins must be left unconnected (floating).	

## 5.2.2 MC58020 IO chip pin assignment for multiple motor types

The MC58020 chip supports outputting PWM motor commands in sign/magnitude and 50/50 modes. For stepping motors it can also output step and direction signals. The IO chip assigns pin function according to the selected output mode.

### For axis 1 of the chipset:

If the output mode is set to **PWM sign/magnitude**, the following pinout should be used.

PWMMag1A PWMMag1B	21 62	output	These pins provide the Pulse Width Modulated signal to the motor. In PWM 50/50 mode, this is the only signal. In PWM sign-magnitude mode, this is the magnitude signal.
PWMSign1A	61	output	In PWM sign-magnitude mode, these pins provide the sign (direction) of
PWMSign1B	23		the PWM signal to the motor amplifier.

If the output mode is set to **PWM 5050**, the following pinout should be used.

1			, 01
PWMMag1A PWMMag1B PWMMag1C	21 62 23	output	These pins provide the Pulse Width Modulated signals for each phase to the motor. If the number of phases is 2, only phase A and B are valid. If the number of phases is 3, phases A,B and C are valid. The number of phases is set using the Motion processor command SetNumberPhases. In PWM 50/50 mode, these are the only signals.

If the output mode is set to Step and Direction, the following pinout should be used.

Pulse1	21	output	This pin provides the pulse (step) signal to the motor.
Direction1	61	output	These pin indicates the direction of motion and works in conjunction with the pulse signal.
AtRest1	23	output	This signal indicates the axis is at rest and the step motor can be switched to low power or standby.

### For axis 2 of the chipset:

If the output mode is set to **PWM sign/magnitude**, the following pinout should be used.

PWMMag2A PWMMag2B	85 87	output	These pins provide the Pulse Width Modulated signal to the motor. In PWM 50/50 mode, this is the only signal. In PWM sign-magnitude mode, this is the magnitude signal.
PWMSign2A	60	output	In PWM sign-magnitude mode, these pins provide the sign (direction) of
PWMSign2B	86		the PWM signal to the motor amplifier.

If the output mode is set to **PWM 5050**, the following pinout should be used.

PWMMag2A PWMMag2B PWMMag2C	85 87 86	output	These pins provide the Pulse Width Modulated signals for each phase to the motor. If the number of phases is 2, only phase A and B are valid. If the number of phases is 3, phases A,B and C are valid. The number of phases is set using the Motion processor command SetNumberPhases. In PWM 50/50 mode, these are the only signals.
----------------------------------	----------------	--------	--

#### If the output mode is set to Step and Direction, the following pinout should be used.

Pulse2	85	output	This pin provides the pulse (step) signal to the motor.
Direction2	60	output	These pin indicates the direction of motion and works in conjunction with the pulse signal.
AtRest2	86	output	This signal indicates the axis is at rest and the step motor can be switched to low power or standby.

#### For axis 3 of the chipset:

n nic output	If the output mode is set to <b>I</b> will sign/ magnitude, the following photot should be used.			
PWMMag3A PWMMag3B	20 19	output	These pins provide the Pulse Width Modulated signal to the motor. In PWM 50/50 mode, this is the only signal. In PWM sign-magnitude mode, this is the magnitude signal.	
PWMSign3A PWMSign3B	59 63	output	In PWM sign-magnitude mode, these pins provide the sign (direction) of the PWM signal to the motor amplifier.	

If the output mode is set to **PWM sign/magnitude**, the following pinout should be used.

If the output mode is set to **PWM 5050**, the following pinout should be used.

1			
PWMMag3A PWMMag3B PWMMag3C	20 19 63	output	These pins provide the Pulse Width Modulated signals for each phase to the motor. If the number of phases is 2, only phase A and B are valid. If the number of phases is 3, phases A,B and C are valid. The number of phases is set using the Motion processor command SetNumberPhases. In PWM 50/50 mode, these are the only signals.

If the output mode is set to Step and Direction, the following pinout should be used.

Pulse3	20	output	This pin provides the pulse (step) signal to the motor.
Direction3	59	output	These pin indicates the direction of motion and works in conjunction with the pulse signal.
AtRest3	63	output	This signal indicates the axis is at rest and the step motor can be switched to low power or standby.

#### For axis 4 of the chipset:

If the output mode is set to **PWM sign/magnitude**, the following pinout should be used.

PWMMag4A PWMMag4B	79 78	output	These pins provide the Pulse Width Modulated signal to the motor. In PWM 50/50 mode, this is the only signal. In PWM sign-magnitude mode, this is the magnitude signal.
PWMSign4A	26	output	In PWM sign-magnitude mode, these pins provide the sign (direction) of
PWMSign4B	80		the PWM signal to the motor amplifier.

#### If the output mode is set to **PWM 5050**, the following pinout should be used.

PWMMag4A PWMMag4B79 78 80outputThese pins provide the Pulse Width Modulate the motor. If the number of phases is 2, only the number of phases is 3, phases A,B and C phases is set using the Motion processor com In PWM 50/50 mode, these are the only sign	phase A and B are valid. If are valid. The number of mand SetNumberPhases.

#### If the output mode is set to Step and Direction, the following pinout should be used.

Pulse4	79	output	This pin provides the pulse (step) signal to the motor.
Direction4	26	output	These pin indicates the direction of motion and works in conjunction with the pulse signal.
AtRest4	80	output	This signal indicates the axis is at rest and the step motor can be switched to low power or standby.

Any unused pins may be left unconnected (floating).

# 5.2.3 MC58020 CP chip pin description

Pin Name and number		Direction	Description
~Reset	133	input	This is the master reset signal. When brought <i>low</i> , this pin resets the chipset to its initial conditions.
~WriteEnable	89	output	This signal is the write-enable strobe. When <i>low</i> , this signal indicates that data is being written to the bus.
~ReadEnable	93	output	This signal is the read-enable strobe. When <i>low</i> , this signal indicates that data is being read from the bus.
~Strobe	96	output	This signal is <i>low</i> when the data and address are valid during CP communications. It should be connected to IO chip pin 54, CPStrobe.
R/~W	92	output	This signal is <i>high</i> when the CP chip is performing a read, and <i>low</i> when it is performing a write. It should be connected to IO chip pin 53, CPR/~W.
W/~R	19	output	This signal is the inverse of R/-W; it is <i>high</i> when R/-W is low, and vice versa. For some decode circuits and devices this is more convenient than R/-W.
Ready	120	input	Ready can be pulled low to add wait states for external accesses. Ready indicates that an external device is prepared for a bus transaction to be completed. If the device is not ready, it pulls the Ready pin <i>low</i> . The motion processor then waits one cycle and checks Ready again.
			This signal can be left unconnected if it is not used.
~PeriphSlct	82	output	This signal is <i>low</i> when peripheral devices on the data bus are being addressed. It should be connected to IO chip pin 52, CPPeriphSlct.
~RAMSIct	87	output	This signal is <i>low</i> when external memory is being accessed.
SrlXmt	25	output	This pin outputs serial data from the asynchronous serial port.
SrIRcv	26	input	This pin inputs serial data to the asynchronous serial port.
CANXmt SrlEnable	72	output	<ul><li>When the CAN host interface is used, this pin transmits serial data to the CAN transceiver.</li><li>When the multi-drop serial interface is used, this pin sets the serial port enable line and the CANXmt function is not available. SrlEnable is <i>high</i> during transmission for the multi-drop protocol and <i>low</i> at all other times.</li></ul>
CANRcv	70	output	This pin receives serial data from the CAN transceiver.
SPIClock	35	output	This pin is the clock signal used for strobing synchronous serial data to the serial DAC(s). This signal is only active when SPI data is being transmitted.
SPIXmt	30	output	This pin transmits synchronous serial data to the serial DAC(s).
IOInterrupt	23	input	This interrupt signal is used for IO to CP communication. It should be connected to IO chip pin 77, CPInterrupt.
IOClock	123	input	This is the CP chip clock signal. It should be connected to IO chip pin 24, CPClock.
ClockOut	73	output	This signal is the reference output clock. Its frequency is the same as the MasterClkIn signal to the IO chip, nominally 40MHz.

CP

	СР					
Pin Name and number Direc		Direction	Description			
Addr0 Addr1 Addr2 Addr3 Addr4 Addr5 Addr6 Addr7 Addr8 Addr7 Addr8 Addr9 Addr10 Addr11 Addr12 Addr13 Addr14 Addr15	80 78 74 71 68 64 61 57 53 51 48 45 43 39 34 31	output	Multi-purpose Address lines. These pins comprise the CP chip's external address bus, used to select devices for communication over the data bus. Addr0, Addr1, and Addr15 are connected to the corresponding CPAddr pins on the IO chip, and are used to communicate between the CP and IO chips. Other address pins may be used for DAC output, parallel word input, or user- defined I/O operations. See the User's Guide for a complete memory map.			
Data0 Data1 Data2 Data3 Data4 Data5 Data6 Data7 Data8 Data7 Data8 Data9 Data10 Data11 Data12 Data13 Data14 Data15	127 130 132 134 136 138 143 5 9 13 15 17 20 22 24 27	bi-directional	Multi-purpose data lines. These pins comprise the CP chip's external data bus, used for all communications with the IO chip and peripheral devices such as external memory or DACs. They may also be used for parallel-word input and for user-defined I/O operations.			
AnalogVcc	116	input	Analog input Vcc. This pin should be connected to the analog input supply voltage, which must be in the range $3.0-3.6$ V. If the analog input circuitry is not used, this pin should be tied to V <sub>cc</sub> .			
AnalogRefHigh	115	input	Analog high voltage reference for $A/D$ input. The allowed range is AnalogRefLow to AnalogVcc. If the analog input circuitry is not used, this pin should be tied to $V_{cc}$ .			
AnalogRefLow	114	input	Analog low voltage reference for A/D input. The allowed range is AnalogGND to AnalogRefHigh. If the analog input circuitry is not used, this pin should be tied to GND.			
AnalogGND	117	input	Analog input ground. This pin should be connected to the analog input power supply return. If the analog input circuitry is not used, this pin should be tied to GND.			
Analog0 Analog1 Analog2 Analog3 Analog4 Analog5 Analog6 Analog7	112 113 110 111 107 109 105 108	input	These signals provide general-purpose analog voltage levels which are sampled by an internal A/D converter. The A/D resolution is 10 bits. The allowed signal input range is AnalogRefLow to AnalogRefHigh. Any unused pins should be tied to AnalogGND. If the analog input circuitry is not used, these pins should be tied to GND.			

Pin Name and number Direction		Direction	Description
PosLim1 PosLim2 PosLim3 PosLim4	46 59 65 81	input	These signals provide inputs from the positive-side (forward) travel limit switches. On power-up or after reset these signals default to active <i>low</i> interpretation, but the interpretation can be set explicitly using the <b>SetSignalSense</b> instruction. The number of available axes determines which of these signals are valid. Invalid or unused pins may be left unconnected.
NegLim1 NegLim2 NegLim3 NegLim4	38 55 62 69	input	These signals provide inputs from the negative-side (reverse) travel limit switches. On power-up or after reset these signals default to active <i>low</i> interpretation, but the interpretation can be set explicitly using the <b>SetSignalSense</b> instruction. The number of available axes determines which of these signals are valid. Invalid or unused pins may be left unconnected.
AxisOut1 AxisOut2 AxisOut3 AxisOut4	32 119 88 54	output	Each of these pins can be conditioned to track the state of any bit in the Status registers associated with its axis. The number of available axes determines which of these signals are valid. Invalid or unused pins may be left unconnected.
AxisIn1 AxisIn2 AxisIn3 AxisIn4	16 8 52 83	input	These are general-purpose inputs that can also be used as a breakpoint input. The number of available axes determines which of these signals are valid. Invalid or unused pins may be left unconnected.
Hall1A Hall1B Hall1C Hall2A Hall2B Hall2C Hall3A Hall3B Hall3C Hall4A Hall4B Hall4C	18 14 37 6 2 126 47 44 40 79 75 56	input	Hall sensor inputs. Each set (A, B, and C) of signals encodes 6 valid states as follows: A on, A and B on, B on, B and C on, C on, C and A on. A sensor is defined as being on when its signal is <i>high</i> . Note: These signals should only be connected to Hall sensors that are mounted at a 120° offset. Motors with hall signals 60° apart will not work. The number of available axes determines which of these signals are valid. Invalid or unused pins may be left unconnected.
~HostInterrupt Synch	131 21	output input/output	When <i>low</i> , this signal causes an interrupt to be sent to the host processor. This pin is the synchronization signal. In the disabled mode, the pin is configured as an input and is not used. In the master mode, the pin outputs a synchronization pulse that can be used by slave nodes or other devices to synchronize with the internal chip cycle of the master node. In the slave mode, the pin is configured as an input and should be connected to the Synch pin on the master node. A pulse on the pin synchronizes the internal chip cycle to the signal provided by the master node. If this pin is not used it may be left unconnected.
OscFilter1 OscFilter2	11 10		These signals connect to the external oscillator filter circuitry. Section 5.3 shows the required filter circuitry.
V <sub>cc5</sub>	58		This signal can optionally be tied to a 5V logic supply, which is required for reprogramming the chipset firmware.
Vssf	12		This signal must be tied to pin 28 using a bypass capacitor. A ceramic capacitor with a value between $0.1\mu$ F and $0.01\mu$ F should be used.
Vcc	4, 29, 42, 50, 67, 77,86, 95, 122, 129, 1413, 28, 41, 49, 66, 76,85, 94, 125, 128, 140		CP digital supply voltage. All of these pins must be connected to the supply voltage. $V_{cc}$ must be in the range $3.0 - 3.6$ V.
GND			CP digital supply ground. All of these pins must be connected to the digital power supply return.
AGND	98, 99, 100, 101, 102, 103, 104, 106		These signals must be tied to AnalogGND. If the analog input circuitry is not used, these pins must be tied to GND.

### MC58000 Electrical Specification – Preliminary 11/13/2003

Pin Name and number		Direction	Description
	90, 91,	97, 118, 121, 5, 137, 139,	These signals must be left unconnected.

CP

# 5.3 External oscillator filter

The following circuit shows the recommended configuration and suggested values for the filter that must be connected to the OscFilter1 and OscFilter2 pins of the CP chip. The resistor tolerance is  $\pm 5\%$  and the capacitor tolerance is  $\pm 20\%$ .

