

ADC0844/ADC0848 8-Bit µP Compatible A/D Converters with Multiplexer Options

8 Bits

 $5 V_{DC}$ 

15 mW 40 μs



# ADC0844/ADC0848 8-Bit µP Compatible A/D Converters with Multiplexer Options

# **General Description**

The ADC0844 and ADC0848 are CMOS 8-bit successive approximation A/D converters with versatile analog input multiplexers. The 4-channel or 8-channel multiplexers can be software configured for single-ended, differential or pseudo-differential modes of operation.

The differential mode provides low frequency input common mode rejection and allows offsetting the analog range of the converter. In addition, the A/D's reference can be adjusted enabling the conversion of reduced analog ranges with 8-bit resolution.

The A/Ds are designed to operate from the control bus of a wide variety of microprocessors. TRI-STATE output latches that directly drive the data bus permit the A/Ds to be configured as memory locations or I/O devices to the microprocessor with no interface logic necessary.


### **Features**

- Easy interface to all microprocessors
- Operates ratiometrically or with 5 V<sub>DC</sub>
- voltage referenceNo zero or full-scale adjust required
- 4-channel or 8-channel multiplexer with address logic
- Internal clock
- 0V to 5V input range with single 5V power supply
- 0.3" standard width 20-pin or 24-pin DIP
- 28 Pin Molded Chip Carrier Package

# Key Specifications


- Resolution
  - Total Unadjusted Error  $\pm \frac{1}{2}$  LSB and  $\pm 1$  LSB
- Single Supply

- Low Power
- Conversion Time

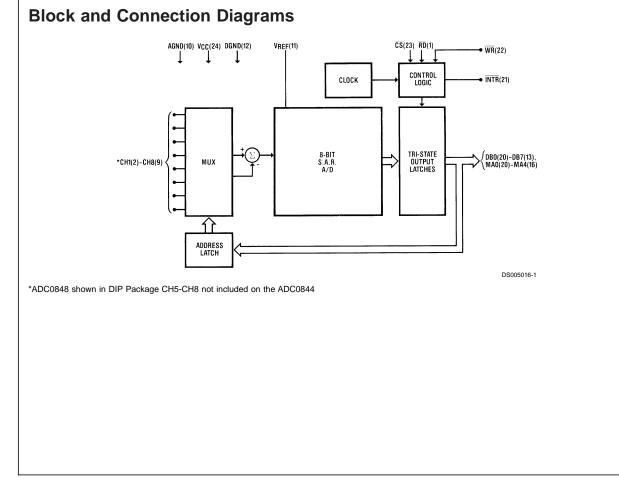



# Block and Connection Diagrams (Continued)


### Molded Chip Carrier Package

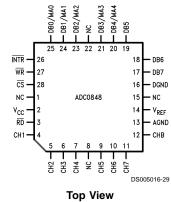

See Ordering Information

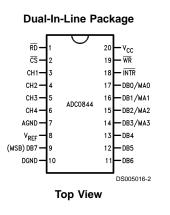



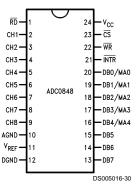

**Top View** 

# **Ordering Information**

Temperature	Total Unadj	usted Error	MUX	Package
Range	±1⁄2 LSB	±1 LSB	Channels	Outline
		ADC0844CCN	4	N20A
0°C to +70°C				Molded Dip
	ADC0848BCN		8	N24C
		ADC0848CCN		Molded Dip
	ADC0844BCJ		4	J20A
–40°C to +85°C		ADC0844CCJ		Cerdip
-40 C 10 +05 C	ADC0848BCV		8	V28A
		ADC0848CCV		Molded Chip Carrier

# Absolute Maximum Ratings (Notes 1, 2)

If Military/Aerospace specified devices are required, please contact the National Semiconductor Sales Office/ Distributors for availability and specifications.

Supply Voltage (V <sub>CC</sub> )	6.5V
Voltage	
Logic Control Inputs	-0.3V to +15V
At Other Inputs and Outputs	–0.3V to $V_{CC}$ +0.3V
Input Current at Any Pin (Note 3)	5 mA
Package Input Current (Note 3)	20 mA
Storage Temperature	–65°C to +150°C
Package Dissipation at T <sub>A</sub> =25°C	875 mW
ESD Susceptibility (Note 4)	800V

Lead Temperature	
(Soldering, 10 seconds)	
Dual-In-Line Package (Plastic)	260°C
Dual-In-Line Package (Ceramic)	300°C
Molded Chip Carrier Package	
Vapor Phase (60 seconds)	215°C
Infrared (15 seconds)	220°C

# Operating Conditions (Notes 1, 2)

Supply Voltage (V <sub>CC</sub> )	4.5 $V_{\rm DC}$ to 6.0 $V_{\rm DC}$
Temperature Range	T <sub>MIN</sub> ≤T <sub>A</sub> ≤T <sub>MAX</sub>
ADC0844CCN, ADC0848BCN,	0°C≤T <sub>A</sub> ≤70°C
ADC0848CCN	
ADC0844BCJ, ADC0844CCJ,	–40°C≤T <sub>A</sub> ≤85°C
ADC0848BCV, ADC0848CCV	

## **Electrical Characteristics**

The following specifications apply for  $V_{CC} = 5 V_{DC}$  unless otherwise specified. Boldface limits apply from  $T_{MIN}$  to  $T_{MAX}$ ; all other limits  $T_A = T_j = 25^{\circ}C$ .

			ADC0844BCJ ADC0844CCJ		ADC08 ADC08	ADC0844CCI 48BCN, ADC0 48BCV, ADC0	0848CCN	
Parameter	Conditions	Тур	Tested	Design	Тур	Tested	Design	Limit Units
		(Note 5)	Limit	Limit	(Note 5)	Limit	Limit	
			(Note 6)	(Note 7)		(Note 6)	(Note 7)	
CONVERTER AND MULTIPLEXER CH	ARACTERISTICS		I			1	1	1
Maximum Total	V <sub>REF</sub> =5.00 V <sub>DC</sub>							
Unadjusted Error	(Note 8)							
ADC0844BCN, ADC0848BCN, BCV						±1/2	±1/2	LSB
ADC0844CCN, ADC0848CCN, CCV						±1	±1	LSB
ADC0844CCJ			±1					LSB
Minimum Reference		2.4	1.1		2.4	1.2	1.1	kΩ
Input Resistance								
Maximum Reference		2.4	5.9		2.4	5.4	5.9	kΩ
Input Resistance								
Maximum Common-Mode	(Note 9)		V <sub>CC</sub> +0.05			V <sub>CC</sub> +0.05	V <sub>CC</sub> +0.05	V
Input Voltage								
Minimum Common-Mode	(Note 9)		GND-0.05			GND-0.05	GND-0.05	V
Input Voltage								
DC Common-Mode Error	Differential Mode	±1/16	±1/4		±1/16	±1/4	±1/4	LSB
Power Supply Sensitivity	V <sub>CC</sub> =5V±5%	±1/16	±1⁄8		±1/16	±1⁄8	±1⁄8	LSB
Off Channel Leakage	(Note 10)							
Current	On Channel=5V,		-1			-0.1	-1	μA
	Off Channel=0V							
	On Channel=0V,		1			0.1	1	μA
	Off Channel=5V							
DIGITAL AND DC CHARACTERISTICS	1				I	1	1	
V <sub>IN(1)</sub> , Logical "1" Input	V <sub>CC</sub> =5.25V		2.0			2.0	2.0	V
Voltage (Min)								
V <sub>IN(0)</sub> , Logical "0" Input	V <sub>CC</sub> =4.75V		0.8			0.8	0.8	V
Voltage (Max)								
I <sub>IN(1)</sub> , Logical "1" Input	V <sub>IN</sub> =5.0V	0.005	1		0.005		1	μA
Current (Max)								
I <sub>IN(0)</sub> , Logical "0" Input Current (Max)	V <sub>IN</sub> =0V	-0.005	-1		-0.005		-1	μA
V <sub>OUT(1)</sub> , Logical "1"	V <sub>CC</sub> =4.75V							
Output Voltage (Min)	I <sub>OUT</sub> =-360 μA		2.4			2.8	2.4	V
	I <sub>OUT</sub> =-10 μA		4.5			4.6	4.5	V

## Electrical Characteristics (Continued)

The following specifications apply for  $V_{CC} = 5 V_{DC}$  unless otherwise specified.**Boldface limits apply from T<sub>MIN</sub> to T<sub>MAX</sub>;** all other limits T<sub>A</sub> = T<sub>i</sub> = 25°C.

			ADC0844BCJ ADC0844CCJ			ADC0844CCI 48BCN, ADC0 48BCV, ADC0	0848CCN	
Parameter	Conditions	Тур	Tested	Design	Тур	Tested	Design	Limit Units
		(Note 5)	Limit	Limit	(Note 5)	Limit	Limit	
			(Note 6)	(Note 7)		(Note 6)	(Note 7)	
DIGITAL AND DC CHARACTERISTICS								
V <sub>OUT(0)</sub> , Logical "0"	V <sub>CC</sub> =4.75V		0.4			0.34	0.4	V
Output Voltage (Max)	I <sub>OUT</sub> =1.6 mA							
I <sub>OUT</sub> , TRI-STATE Output	V <sub>OUT</sub> =0V	-0.01	-3		-0.01	-0.3	-3	μA
Current (Max)	V <sub>OUT</sub> =5V	0.01	3		0.01	0.3	3	μA
I <sub>SOURCE</sub> , Output Source	V <sub>OUT</sub> =0V	-14	-6.5		-14	-7.5	-6.5	mA
Current (Min)								
I <sub>SINK</sub> , Output Sink	V <sub>OUT</sub> =V <sub>CC</sub>	16	8.0		16	9.0	8.0	mA
Current (Min)								
I <sub>CC</sub> , Supply Current (Max)	<mark>CS</mark> =1, V <sub>REF</sub> Open	1	2.5		1	2.3	2.5	mA

## **AC Electrical Characteristics**

The following specifications apply for  $V_{CC} = 5V_{DC}$ ,  $t_r = t_f = 10$  ns unless otherwise specified. Boldface limits apply from  $T_{MIN}$  to  $T_{MAX}$ ; all other limits  $T_A = T_j = 25^{\circ}C$ .

			Tested	Design	
Parameter	Conditions	Тур	Limit	Limit	Units
		(Note 5)	(Note 6)	(Note 7)	
t <sub>c</sub> , Maximum Conversion Time (See Graph)		30	40	60	μs
t <sub>w(WR)</sub> , Minimum WR Pulse Width	(Note 11)	50	150		ns
t <sub>ACC</sub> , Maximum Access Time (Delay from Falling Edge of	C <sub>L</sub> = 100 pF	145		225	ns
RD to Output Data Valid)	(Note 11)				
t <sub>1H</sub> , t <sub>0H</sub> , TRI-STATE Control (Maximum Delay from Rising	$C_{L} = 10 \text{ pF}, R_{L} = 10 \text{ k}$	125		200	ns
Edge of RD to Hi-Z State)	(Note 11)				
$t_{WI},t_{RI},$ Maximum Delay from Falling Edge of $\overline{WR}$ or $\overline{RD}$ to	(Note 11)	200	400		ns
Reset of INTR					
t <sub>DS</sub> , Minimum Data Set-Up Time	(Note 11)	50	100		ns
t <sub>DH</sub> , Minimum Data Hold Time	(Note 11)	0	50		ns
C <sub>IN</sub> , Capacitance of Logic Inputs		5			pF
C <sub>OUT</sub> , Capacitance of Logic Outputs		5			pF

Note 1: Absolute Maximum Ratings indicate limits beyond which damage to the device may occur. DC and AC electrical specifications do not apply when operating the device beyond its specified operating conditions.

Note 2: All voltages are measured with respect to the ground pins.

**Note 3:** When the input voltage  $(V_{IN})$  at any pin exceeds the power supply rails  $(V_{IN} < V^{-} or V_{IN} > V^{+})$  the absolute value of the current at that pin should be limited to 5 mA or less. The 20 mA package input current limits the number of pins that can exceed the power supply boundaries with a 5 mA current limit to four.

Note 4: Human body model, 100 pF discharged through a 1.5  $k\Omega$  resistor.

Note 5: Typicals are at 25°C and represent most likely parametric norm.


Note 6: Tested limits are guaranteed to National's AOQL (Average Outgoing Quality Level).

Note 7: Design limits are guaranteed by not 100% tested. These limits are not used to calculate outgoing quality levels.


Note 8: Total unadjusted error includes offset, full-scale, linearity, and multiplexer error.


**Note 9:** For  $V_{IN}(-) \ge V_{IN}(+)$  the digital output code will be 0000 0000. Two on-chip diodes are tied to each analog input, which will forward-conduct for analog input voltages one diode drop below ground or one diode drop greater than  $V_{CC}$  supply. Be careful during testing at low  $V_{CC}$  levels (4.5V), as high level analog input (5V) can cause this input diode to conduct, especially at elevated temperatures, and cause errors for analog inputs near full-scale. The spec allows 50 mV forward bias of either diode. This means that as long as the analog  $V_{IN}$  does not exceed the supply voltage by more than 50 mV, the output code will be correct. To achieve an absolute 0  $V_{DC}$  to 5  $V_{DC}$  input voltage range will therefore require a minimum supply voltage of 4.950  $V_{DC}$  over temperature variations, initial tolerance and loading. **Note 10:** Off channel leakage current is measured after the channel selection.


Note 11: The temperature coefficient is 0.3%/°C.

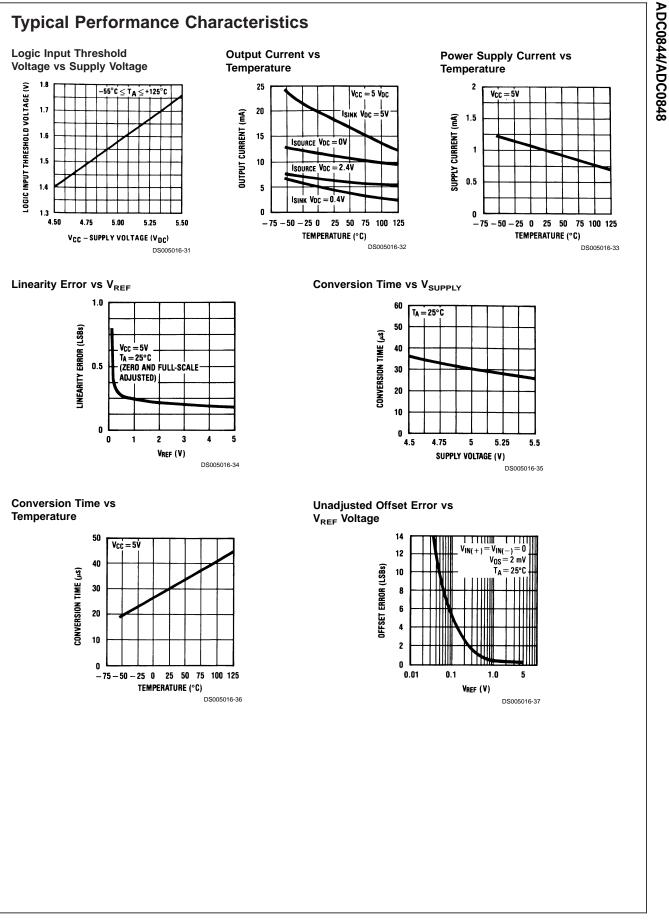


# **TRI-STATE Test Circuits and Waveforms**

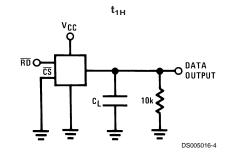


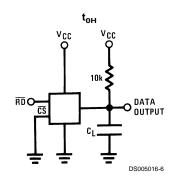

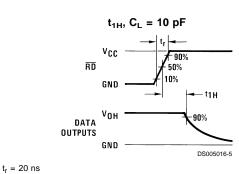


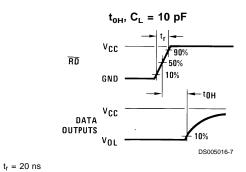

# Leakage Current Test Circuit

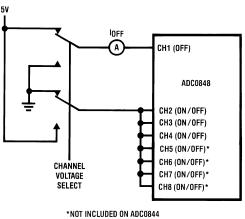



DS005016-8

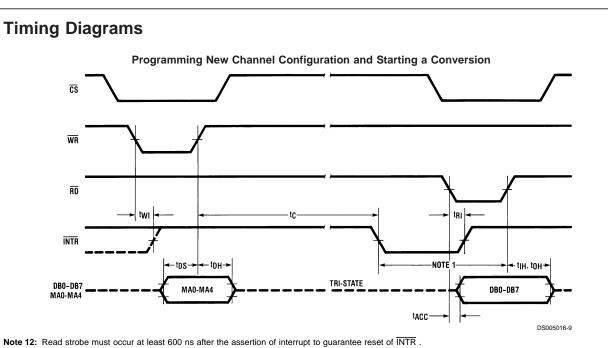

Note 13: MA stands for MUX address.

### Using the Previously Selected Channel Configuration and Starting a Conversion

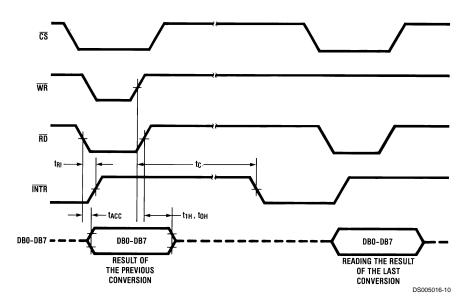

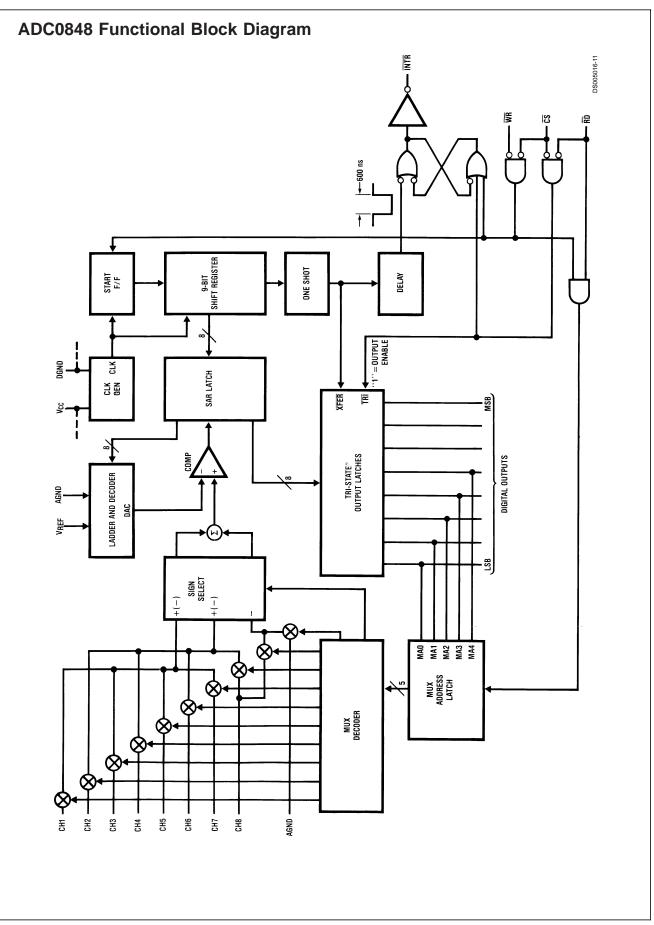

# **Functional Description**

The ADC0844 and ADC0848 contain a 4-channel and 8-channel analog input multiplexer (MUX) respectively. Each MUX can be configured into one of three modes of operation differential, pseudo-differential, and single ended. These modes are discussed in the Applications Information Section. The specific mode is selected by loading the MUX address latch with the proper address (see Table 1 and Table 2). Inputs to the MUX address latch (MA0-MA4) are common with data bus lines (DB0-DB4) and are enabled when the  $\overline{RD}$  line is high. A conversion is initiated via the  $\overline{CS}$ and WR lines. If the data from a previous conversion is not read, the INTR line will be low. The falling edge of WR will reset the INTR line high and ready the A/D for a conversion cycle. The rising edge of  $\overline{\rm WR},$  with  $\overline{\rm RD}$  high, strobes the data on the MA0/DB0-MA4/DB4 inputs into the MUX address latch to select a new input configuration and start a conversion. If the RD line is held low during the entire low period of WR the previous MUX configuration is retained, and the data of the previous conversion is the output on lines DB0-DB7. After the conversion cycle (t\_C  $\leq$  40  $\mu s),$  which is set by the internal clock frequency, the digital data is transferred to the output latch and the INTR is asserted low. Taking CS and RD low resets INTR output high and outputs the conversion result on the data lines (DB0-DB7).

# **Applications Information**

### **1.0 MULTIPLEXER CONFIGURATION**

The design of these converters utilizes a sampled-data comparator structure which allows a differential analog input to be converted by a successive approximation routine. The actual voltage converted is always the difference between an assigned "+" input terminal and a "-" input terminal. The polarity of each input terminal of the pair being converted indicates which line the converter expects to be the most positive. If the assigned "+" input is less than the "-" input the converter responds with an all zeros output code. A unique input multiplexing scheme has been utilized to provide multiple analog channels. The input channels can be software configured into three modes: differential, single ended, or pseudo-differential. Figure 1 shows the three modes using the 4-channel MUX ADC0844. The eight inputs of the ADC0848 can also be configured in any of the three modes. In the differential mode, the ADC0844 channel inputs are grouped in pairs, CH1 with CH2 and CH3 with CH4. The polarity assignment of each channel in the pair is interchangeable. The single-ended mode has CH1-CH4 assigned as the positive input with the negative input being the analog ground (AGND) of the device. Finally, in the pseudo-differential mode CH1-CH3 are positive inputs referenced to CH4 which is now a pseudo-ground. This pseudo-ground input can be set to any potential within the input common-mode range of the converter. The analog signal conditioning required in transducer-based data acquisition systems is significantly simplified with this type of input flexibility. One converter package can now handle ground referenced inputs and true differential inputs as well as signals with some arbitrary reference voltage.


The analog input voltages for each channel can range from 50 mV below ground to 50 mV above  $V_{CC}$  (typically 5V) without degrading conversion accuracy.


	MUX A	ddress		CS	WR	RD		Channel#				MUX
MA3	MA2	MA1	MA0				CH1	CH2	CH3	CH4	AGND	Mode
Х	L	L	L	L		Н	+	_				
Х	L	L	н	L	٦r	н	-	+				Differential
Х	L	н	L	L		н			+	_		
Х	L	н	н	L		н			_	+		
L	Н	L	L	L		Н	+				-	
L	н	L	н	L	ᅸ	н		+			-	Single-Endeo
L	н	н	L	L		н			+		-	
L	н	н	н	L		н				+	_	
Н	Н	L	L	L		Н	+			_		Pseudo-
Н	н	L L	н	L	ᅸ	н		+		-		Differential
Н	н	н	L	L		н			+	_		
Х	Х	Х	Х	L	্রন্দ	L		F	revious C	hannel C	onfiguratior	<u>.</u> ו


### TABLE 1. ADC0844 MUX ADDRESSING


X=don't care

### Applications Information (Continued)

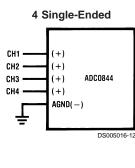





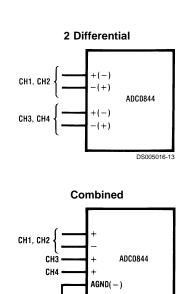

### FIGURE 1. Analog Input Multiplexer Options

### 2.0 REFERENCE CONSIDERATIONS

The voltage applied to the reference input of these converters defines the voltage span of the analog input (the difference between  $V_{\rm IN(MAX)}$  and  $V_{\rm IN(MIN)})$  over which the 256 possible output codes apply. The devices can be used in either ratiometric applications or in systems requiring absolute accuracy. The reference pin must be connected to a voltage source capable of driving the minimum reference input resistance of 1.1 k\Omega. This pin is the top of a resistor divider string used for the successive approximation conversion.

In a ratiometric system (*Figure 2a*), the analog input voltage is proportional to the voltage used for the A/D reference. This voltage is typically the system power supply, so the V<sub>REF</sub> pin can be tied to V<sub>CC</sub>. This technique relaxes the stability requirements of the system reference as the analog input and A/D reference move together maintaining the same output code for a given input condition.

For absolute accuracy (*Figure 2b*), where the analog input varies between very specific voltage limits, the reference pin can be biased with a time and temperature stable voltage source. The LM385 and LM336 reference diodes are good low current devices to use with these converters.

The maximum value of the reference is limited to the V<sub>CC</sub> supply voltage. The minimum value, however, can be quite small (see Typical Performance Characteristics) to allow direct conversions of transducer outputs providing less than a 5V output span. Particular care must be taken with regard to noise pickup, circuit layout and system error voltage sources when operating with a reduced span due to the increased sensitivity of the converter (1 LSB equals  $V_{REF}/256$ ).

### 3.0 THE ANALOG INPUTS

# 3.1 Analog Differential Voltage Inputs and Common-Mode Rejection

The differential input of these converters actually reduces the effects of common-mode input noise, a signal common to both selected "+" and "--" inputs for a conversion (60 Hz is most typical). The time interval between sampling the "+" input and then the "--" inputs is  $1/_2$  of a clock period. The change in the common-mode voltage during this short time interval can cause conversion errors. For a sinusoidal common-mode signal this error is:

DS005016-15

$$V_{\text{ERROR(MAX)}} = V_{\text{peak}} (2\pi f_{\text{CM}}) \times 0.5 \times \left(\frac{t_{\text{C}}}{8}\right)$$

where  $f_{CM}$  is the frequency of the common-mode signal,  $V_{peak}$  is its peak voltage value and  $t_C$  is the conversion time. For a 60 Hz common-mode signal to generate a 1/4 LSB error ( $\approx$ 5 mV) with the converter running at 40  $\mu$ S, its peak value would have to be 5.43V. This large a common-mode signal is much greater than that generally found in a well designed data acquisition system.

Applications Information (Continued)

TABLE 2. ADC0848 MUX Addressing

	MU	X Addı	ress		CS	WR	RD					Chann	el				MUX
MA4	MA3	MA2	MA1	MA0				CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8	AGND	Mode
Х	L	L	L	L	L		Н	+	-								
Х	L	L	L	н	L		н	-	+								
Х	L	L	н	L	L		н			+	-						
Х	L	L	н	н	L	Ъ₽	н			-	+						Differential
Х	L	н	L	L	L		н					+	-				
Х	L	н	L	н	L		н					-	+				
Х	L	н	н	L	L		Н							+	-		
Х	L	Н	н	Н	L		Н							-	+		
L	н	L	L	L	L		Н	+								-	
L	н	L	L	н	L		Н		+							-	
L	н	L	н	L	L		Н			+						-	
L	н	L	н	Н	L	୳୶	Н				+					-	Single-Endeo
L	н	н	L	L	L		н					+				-	
L	н	Н	L	Н	L		Н						+			-	
L	н	Н	н	L	L		Н							+		-	
L	Н	Н	Н	Н	L		Н								+	-	
Н	н	L	L	L	L		н	+							-		
Н	н	L	L	Н	L		Н		+						-		
Н	н	L	н	L	L		Н			+					-		Pseudo-
Н	н	L	н	Н	L	ᅶ	Н				+				-		Differential
Н	н	Н	L	L	L		Н					+			-		
Н	н	Н	L	Н	L		Н						+		-		
Н	н	н	н	L	L		Н							+	-		
Х	Х	X	Х	Х	L	∿	L			Prev	ious Cł	nannel	Config	uration			

### 3.2 Input Current

Due to the sampling nature of the analog inputs, short duration spikes of current enter the "+" input and exit the "-" input at the clock edges during the actual conversion. These currents decay rapidly and do not cause errors as the internal comparator is strobed at the end of a clock period. Bypass capacitors at the inputs will average these currents and cause an effective DC current to flow through the output resistance of the analog signal source. Bypass capacitors should not be used if the source resistance is greater than 1 k $\Omega$ .

### 3.3 Input Source Resistance

The limitation of the input source resistance due to the DC leakage currents of the input multiplexer is important. A worst-case leakage current of  $\pm 1 \ \mu$ A over temperature will create a 1 mV input error with a 1 k $\Omega$  source resistance. An op amp RC active low pass filter can provide both impedance buffering and noise filtering should a high impedance signal source be required.

### **4.0 OPTIONAL ADJUSTMENTS**

### 4.1 Zero Error

The zero of the A/D does not require adjustment. If the minimum analog input voltage value,  $V_{\rm IN(MIN)}$ , is not ground, a zero offset can be done. The converter can be made to output 0000 0000 digital code for this minimum input voltage

by biasing any V<sub>IN</sub> (–) input at this V<sub>IN(MIN)</sub> value. This is useful for either differential or pseudo-differential modes of input channel configuration.

The zero error of the A/D converter relates to the location of the first riser of the transfer function and can be measured by grounding the V<sup>-</sup> input and applying a small magnitude positive voltage to the V<sup>+</sup> input. Zero error is the difference between actual DC input voltage which is necessary to just cause an output digital code transition from 0000 0000 to 0000 0001 and the ideal ½ LSB value (½ LSB=9.8 mV for V<sub>REF</sub>=5.000 V<sub>DC</sub>).

### 4.2 Full-Scale

The full-scale adjustment can be made by applying a differential input voltage which is 1  $\frac{1}{2}$  LSB down from the desired analog full-scale voltage range and then adjusting the magnitude of the  $V_{\sf REF}$  input for a digital output code changing from 1111 1110 to 1111 1111.

# 4.3 Adjusting for an Arbitrary Analog Input Voltage Range

If the analog zero voltage of the A/D is shifted away from ground (for example, to accommodate an analog input signal which does not go to ground), this new zero reference should be properly adjusted first. A V<sub>IN</sub> (+) voltage which equals this desired zero reference plus  $\frac{1}{2}$  LSB (where the LSB is calculated for the desired analog span, 1 LSB = analog span/256) is applied to selected "+" input and the

# Applications Information (Continued)

zero reference voltage at the corresponding "-" input should then be adjusted to just obtain the  $00_{\rm HEX}$  to  $01_{\rm HEX}$  code transition.

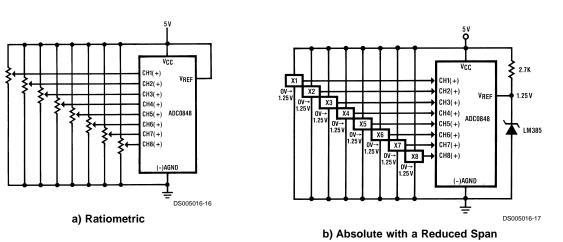


FIGURE 2. Referencing Examples


The full-scale adjustment should be made [with the proper  $V_{\rm IN}$  (–) voltage applied] by forcing a voltage to the  $V_{\rm IN}$  (+) input which is given by:


$$V_{IN}(+)$$
 fs adj =  $V_{MAX} - 1.5 \left[ \frac{(V_{MAX} - V_{MIN})}{256} \right]$ 


where  $V_{\text{MAX}}\text{=}\text{the high end of the analog input range and } V_{\text{MIN}}\text{=}\text{the low end (the offset zero) of the analog range. (Both are ground referenced.)}$ 


The  $V_{REF}$  (or  $V_{CC})$  voltage is then adjusted to provide a code change from FE\_{HEX} to FF\_HEX. This completes the adjustment procedure.

For an example see the Zero-Shift and Span Adjust circuit below.

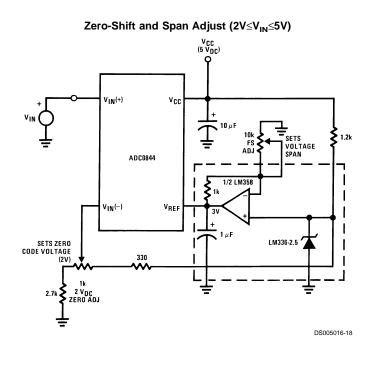

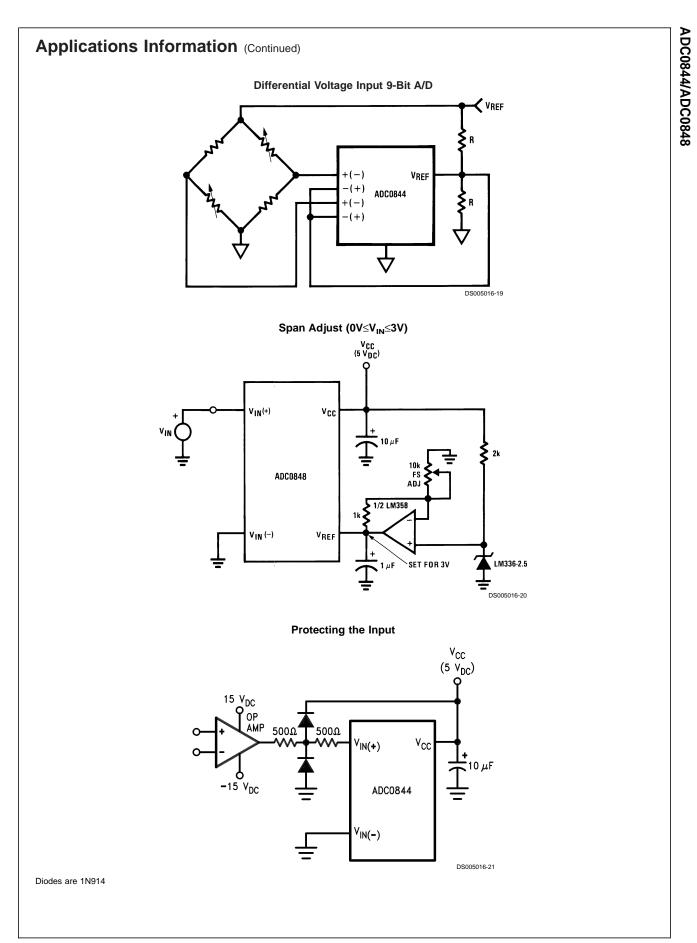

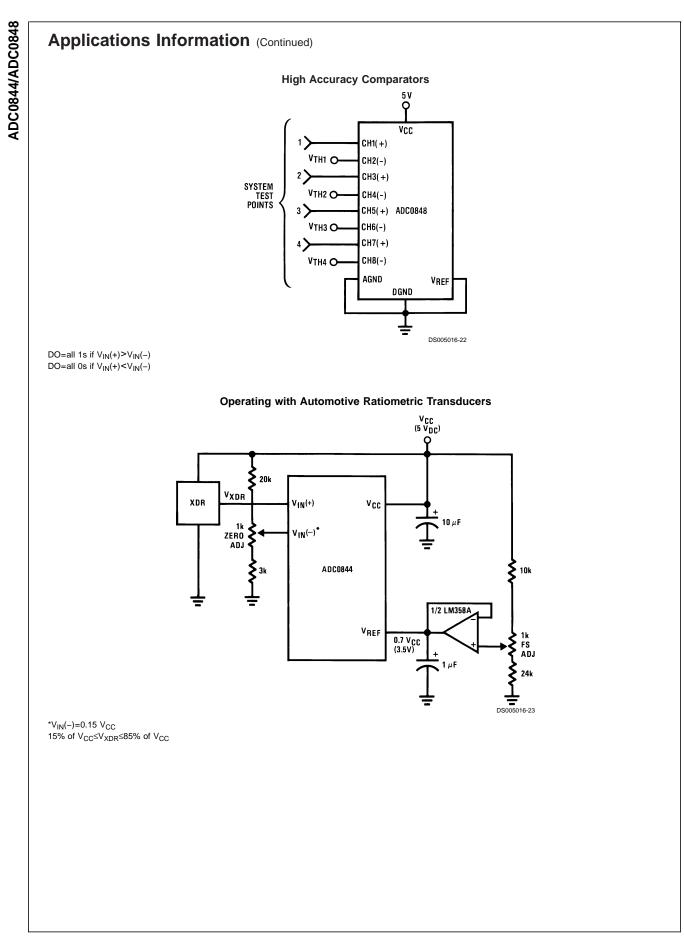

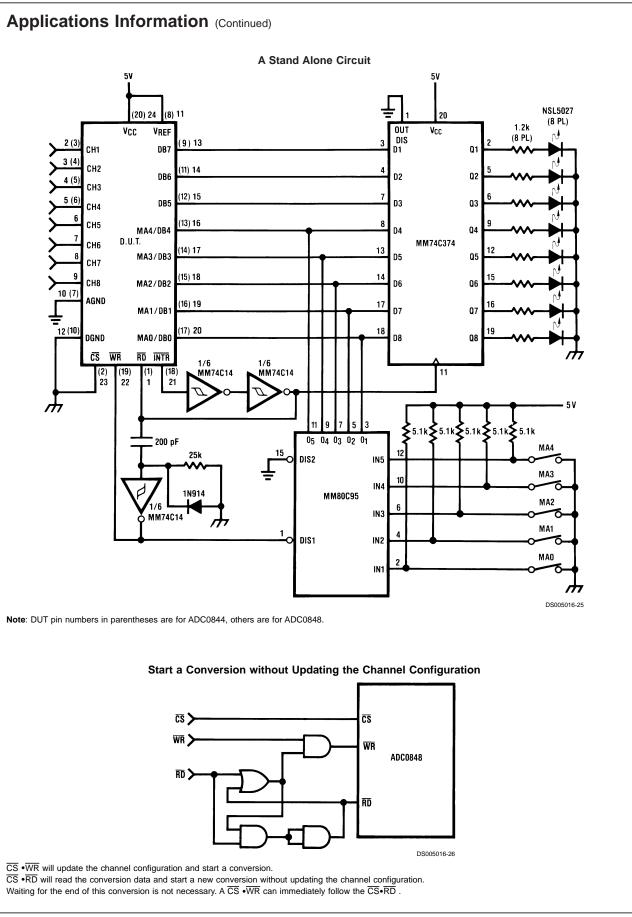


			ADC084	4—INS8039 Interfa	Ce
	5V			5V	
r	40		<b></b>	20	$\wedge$
	Vcc	12	17 DR0 / MA	V <sub>CC</sub> 8	× ~ ~
		13	16 DB0/ MA		
		UB1 14	15 DB1/MA	(-)CH2	$\psi_1$
		DB2	14 DB2/MA		<sup>1</sup> / <sub>2</sub> , <sup>1</sup> / <sub>2</sub>
		DB3	13 UB3/ MA	3	$\checkmark$ $\land$
		17	12 DB4	DC0844	I L L
	INS8039	DB5	11 DB6		/×
		DB7	9 DB7		$\psi_2$
			19 WR		
		RD 10			
		PI0 6		5	
		PI1		( + )CH3 ( - )CH4	÷
			DGND		
L	- 1				
			'		
	דה		דה		
		FOR ADC0844— RATIOMETRIC, D			DS005016-27
CONVE					
CONVE	RTING TWO		IFFERENTIAL S	OH	DS005016-27 ;START PROGRAM AT ADDR 10 ;MAIN PROGRAM
0000	RTING TWO		IFFERENTIAL S ORG JMP	B <b>IGNALS</b> OH BEGIN	;START PROGRAM AT ADDR 10
0000	<b>RTING TWO</b> 04 10	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG	OH BEGIN 10H	;START PROGRAM AT ADDR 10 ;MAIN PROGRAM
0000 0010	<b>RTING TWO</b> 04 10	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG	OH BEGIN 10H	;START PROGRAM AT ADDR 10 ;MAIN PROGRAM ;LOAD R1 WITH A UNUSED ADDR
0000 0010 0012	RTING TWO 04 10 B9 FF	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV	GIGNALS OH BEGIN 10H R1,#0FFH	;START PROGRAM AT ADDR 10 ;MAIN PROGRAM ;LOAD R1 WITH A UNUSED ADDR ;LOCATION
CONVE 0000 0010 0012 0014	RTING TWO 04 10 B9 FF B8 20	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV MOV	GIGNALS OH BEGIN 10H R1,#0FFH R0,#20H	;START PROGRAM AT ADDR 10 ;MAIN PROGRAM ;LOAD R1 WITH A UNUSED ADDR ;LOCATION ;A/D DATA ADDRESS
0000 0010 0012 0014 0016	RTING TWO 04 10 B9 FF B8 20 89 FF	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV MOV ORL	BIGNALS 0H BEGIN 10H R1,#0FFH R0,#20H P1,#0FFH	;START PROGRAM AT ADDR 10 ;MAIN PROGRAM ;LOAD R1 WITH A UNUSED ADDR ;LOCATION ;A/D DATA ADDRESS ;SET PORT 1 OUTPUTS HIGH ;LOAD THE ACC WITH A/D MUX DATA ;CH1 AND CH2 DIFFERENTIAL ;CALL THE CONVERSION SUBROUTINE
CONVE 0000 0010 0012 0014 0016 0018	RTING TWO 04 10 B9 FF B8 20 89 FF 23 00	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV MOV ORL MOV	BIGNALS OH BEGIN 10H R1,#0FFH R0,#20H P1,#0FFH A,00H	;START PROGRAM AT ADDR 10 ;MAIN PROGRAM ;LOAD R1 WITH A UNUSED ADDR ;LOCATION ;A/D DATA ADDRESS ;SET PORT 1 OUTPUTS HIGH ;LOAD THE ACC WITH A/D MUX DATA ;CH1 AND CH2 DIFFERENTIAL ;CALL THE CONVERSION SUBROUTINE ;LOAD THE ACC WITH A/D MUX DATA
CONVE 0000 0010 0012 0014 0016 0018 001A	RTING TWO 04 10 B9 FF B8 20 89 FF 23 00 14 50 23 02	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV MOV ORL MOV CALL MOV	BIGNALS OH BEGIN 10H R1,#0FFH R0,#20H P1,#0FFH A,00H CONV A,#02H	;START PROGRAM AT ADDR 10 ;MAIN PROGRAM ;LOAD R1 WITH A UNUSED ADDR ;LOCATION ;A/D DATA ADDRESS ;SET PORT 1 OUTPUTS HIGH ;LOAD THE ACC WITH A/D MUX DATA ;CH1 AND CH2 DIFFERENTIAL ;CALL THE CONVERSION SUBROUTINE ;LOAD THE ACC WITH A/D MUX DATA ;CH3 AND CH4 DIFFERENTIAL
CONVE 0000 0010 0012 0014 0014 0016 0018 001A 001C	RTING TWO 04 10 B9 FF B8 20 89 FF 23 00 14 50 23 02 18	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV MOV ORL MOV CALL MOV INC	BIGNALS OH BEGIN 10H R1,#0FFH R0,#20H P1,#0FFH A,00H CONV A,#02H R0	;START PROGRAM AT ADDR 10 ;MAIN PROGRAM ;LOAD R1 WITH A UNUSED ADDR ;LOCATION ;A/D DATA ADDRESS ;SET PORT 1 OUTPUTS HIGH ;LOAD THE ACC WITH A/D MUX DATA ;CH1 AND CH2 DIFFERENTIAL ;CALL THE CONVERSION SUBROUTINE ;LOAD THE ACC WITH A/D MUX DATA ;CH3 AND CH4 DIFFERENTIAL ;INCREMENT THE A/D DATA ADDRESS
CONVE 0000 0010 0012 0014 0016 0018 001A 001C	RTING TWO 04 10 B9 FF B8 20 89 FF 23 00 14 50 23 02	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV MOV ORL MOV CALL MOV	BIGNALS OH BEGIN 10H R1,#0FFH R0,#20H P1,#0FFH A,00H CONV A,#02H	;START PROGRAM AT ADDR 10 ;MAIN PROGRAM ;LOAD R1 WITH A UNUSED ADDR ;LOCATION ;A/D DATA ADDRESS ;SET PORT 1 OUTPUTS HIGH ;LOAD THE ACC WITH A/D MUX DATA ;CH1 AND CH2 DIFFERENTIAL ;CALL THE CONVERSION SUBROUTINE ;LOAD THE ACC WITH A/D MUX DATA ;CH3 AND CH4 DIFFERENTIAL
CONVE 0000 0010 0012 0014 0014 0016 0018 001A 001C	RTING TWO 04 10 B9 FF B8 20 89 FF 23 00 14 50 23 02 18	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV MOV ORL MOV CALL MOV INC CALL	BIGNALS OH BEGIN 10H R1,#0FFH R0,#20H P1,#0FFH A,00H CONV A,#02H R0	;START PROGRAM AT ADDR 10 ;MAIN PROGRAM ;LOAD R1 WITH A UNUSED ADDR ;LOCATION ;A/D DATA ADDRESS ;SET PORT 1 OUTPUTS HIGH ;LOAD THE ACC WITH A/D MUX DATA ;CH1 AND CH2 DIFFERENTIAL ;CALL THE CONVERSION SUBROUTINE ;LOAD THE ACC WITH A/D MUX DATA ;CH3 AND CH4 DIFFERENTIAL ;INCREMENT THE A/D DATA ADDRESS ;CALL THE CONVERSION SUBROUTINE
CONVE 0000 0010 0012 0014 0014 0016 0018 001A 001C	RTING TWO 04 10 B9 FF B8 20 89 FF 23 00 14 50 23 02 18	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV MOV ORL MOV CALL MOV INC CALL ;CONTINU	BIGNALS OH BEGIN 10H R1,#0FFH R0,#20H P1,#0FFH A,00H CONV A,#02H R0 CONV	;START PROGRAM AT ADDR 10 ;MAIN PROGRAM ;LOAD R1 WITH A UNUSED ADDR ;LOCATION ;A/D DATA ADDRESS ;SET PORT 1 OUTPUTS HIGH ;LOAD THE ACC WITH A/D MUX DATA ;CH1 AND CH2 DIFFERENTIAL ;CALL THE CONVERSION SUBROUTINE ;LOAD THE ACC WITH A/D MUX DATA ;CH3 AND CH4 DIFFERENTIAL ;INCREMENT THE A/D DATA ADDRESS ;CALL THE CONVERSION SUBROUTINE
CONVE 0000 0010 0012 0014 0016 0018 001A 001C	RTING TWO 04 10 B9 FF B8 20 89 FF 23 00 14 50 23 02 18	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV MOV ORL MOV CALL MOV INC CALL ;CONTINU ;CONVERS	BIGNALS OH BEGIN 10H R1,#0FFH R0,#20H P1,#0FFH A,00H CONV A,#02H R0 CONV E MAIN PROGRAM	;START PROGRAM AT ADDR 10 ;MAIN PROGRAM ;LOAD R1 WITH A UNUSED ADDR ;LOCATION ;A/D DATA ADDRESS ;SET PORT 1 OUTPUTS HIGH ;LOAD THE ACC WITH A/D MUX DATA ;CH1 AND CH2 DIFFERENTIAL ;CALL THE CONVERSION SUBROUTINE ;LOAD THE ACC WITH A/D MUX DATA ;CH3 AND CH4 DIFFERENTIAL ;INCREMENT THE A/D DATA ADDRESS ;CALL THE CONVERSION SUBROUTINE
CONVE 0000 0010 0012 0014 0014 0016 0018 001A 001C	RTING TWO 04 10 B9 FF B8 20 89 FF 23 00 14 50 23 02 18	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV MOV ORL MOV CALL MOV INC CALL ;CONTINU ;CONVERS ;ENTRY:AG	BIGNALS OH BEGIN 10H R1,#0FFH R0,#20H P1,#0FFH A,00H CONV A,#02H R0 CONV E MAIN PROGRAM SION SUBROUTINE	START PROGRAM AT ADDR 10 MAIN PROGRAM LOAD R1 WITH A UNUSED ADDR LOCATION A/D DATA ADDRESS SET PORT 1 OUTPUTS HIGH LOAD THE ACC WITH A/D MUX DATA CH1 AND CH2 DIFFERENTIAL CALL THE CONVERSION SUBROUTINE LOAD THE ACC WITH A/D MUX DATA CH3 AND CH4 DIFFERENTIAL INCREMENT THE A/D DATA ADDRESS CALL THE CONVERSION SUBROUTINE
CONVE 0000 0010 0012 0014 0014 0016 0018 001A 001C	RTING TWO 04 10 B9 FF B8 20 89 FF 23 00 14 50 23 02 18	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV MOV ORL MOV CALL MOV INC CALL ;CONTINU ;CONVERS ;ENTRY:AG	BIGNALS OH BEGIN 10H R1,#0FFH R0,#20H P1,#0FFH A,00H CONV A,#02H R0 CONV E MAIN PROGRAM SION SUBROUTINE CC—A/D MUX DAT	START PROGRAM AT ADDR 10 MAIN PROGRAM LOAD R1 WITH A UNUSED ADDR LOCATION A/D DATA ADDRESS SET PORT 1 OUTPUTS HIGH LOAD THE ACC WITH A/D MUX DATA CH1 AND CH2 DIFFERENTIAL CALL THE CONVERSION SUBROUTINE LOAD THE ACC WITH A/D MUX DATA CH3 AND CH4 DIFFERENTIAL INCREMENT THE A/D DATA ADDRESS CALL THE CONVERSION SUBROUTINE
CONVE 0000 0010 0012 0014 0016 0018 001A 001C 001D	RTING TWO 04 10 B9 FF B8 20 89 FF 23 00 14 50 23 02 18	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV MOV ORL MOV CALL MOV INC CALL ;CONTINU ;CONVERS ;ENTRY:AC	BIGNALS OH BEGIN 10H R1,#0FFH R0,#20H P1,#0FFH A,00H CONV A,#02H R0 CONV E MAIN PROGRAM SION SUBROUTINE CC—A/D MUX DAT. C—CONVERTED D.	START PROGRAM AT ADDR 10 MAIN PROGRAM LOAD R1 WITH A UNUSED ADDR LOCATION A/D DATA ADDRESS SET PORT 1 OUTPUTS HIGH LOAD THE ACC WITH A/D MUX DATA CH1 AND CH2 DIFFERENTIAL CALL THE CONVERSION SUBROUTINE LOAD THE ACC WITH A/D MUX DATA CH3 AND CH4 DIFFERENTIAL INCREMENT THE A/D DATA ADDRESS CALL THE CONVERSION SUBROUTINE
	RTING TWO 04 10 B9 FF B8 20 89 FF 23 00 14 50 23 02 18 14 50	RATIOMETRIC, D	IFFERENTIAL S ORG JMP ORG MOV MOV ORL MOV CALL MOV CALL MOV INC CALL ;CONTINU ;CONVERS ;ENTRY:AC ;EXIT: ACC ORG	BIGNALS OH BEGIN 10H R1,#0FFH R0,#20H P1,#0FFH A,00H CONV A,#02H R0 CONV E MAIN PROGRAM SION SUBROUTINE CC—A/D MUX DAT CONVERTED DA 50H	;START PROGRAM AT ADDR 10 ;MAIN PROGRAM ;LOAD R1 WITH A UNUSED ADDR ;LOCATION ;A/D DATA ADDRESS ;SET PORT 1 OUTPUTS HIGH ;LOAD THE ACC WITH A/D MUX DATA ;CH1 AND CH2 DIFFERENTIAL ;CALL THE CONVERSION SUBROUTINE ;LOAD THE ACC WITH A/D MUX DATA ;CH3 AND CH4 DIFFERENTIAL ;INCREMENT THE A/D DATA ADDRESS ;CALL THE CONVERSION SUBROUTINE

Applications Information (Continued)										
	E PROGRAM FOR AD RTING TWO RATIOM									
0054	32 53	JE	31 L	_00P	;IF INTR = 1 GOTO LOOP					
0056	81			A,@R1	;IF INTR = 0 INPUT A/D DATA					
0057	89 01			- 21,&01H	CLEAR THE A/D CHIP SELECT					
0059	A0	M		@R0,A	;STORE THE A/D DATA					
005A	83	RI	ΕT		RETURN TO MAIN PROGRAM					
			I/O Interfac	ce to NSC800						
			CH1(+) MA CH1(+) MA CH2(+) MA		ADD AD1 AD2 AD2 AD3 AD3 AD4 AD4 AD5 AD5 AD5 AD5 AD5 AD7 B1 B1 B1 B1 AD14 B2 AD14 B3 AD14 B5 AD14 B5 AD14 B1 B1 B1 B1 B1 B1 B1 B1 B1 B1					
SAMPLE	E PROGRAM FOR AD	0C0848—NSC80			WR RD DS005016-28					
8000		NCONV	EQU	16						
000F		DEL	EQU	15	;DELAY 50 µsec CONVERSION					
001F		CS	EQU	1FH	;THE BOARD ADDRESS					
3C00		ADDTA	EQU	003CH	;START OF RAM FOR A/D					
					;DATA					
0000'	08 09 0A 0B	MUXDTA:	DB	08H,09H,0AH,0	BH ;MUX DATA					
0004'	0C 0D 0E 0F		DB	0CH,0DH,0EH,0	)FH					
0008'	0E 1F	START:	LD	C,CS						
000A'	06 16		LD	B,NCONV						
000C'	21 0000'		LD	HL,MUXDTA						
000F'	11 003C		LD	DE,ADDTA						
0012'	ED A3	STCONV:	OUTI		;LOAD A/D'S MUX DATA ;AND START A CONVERSION					
0014'	EB		EX	DE,HL	;HL=RAM ADDRESS FOR THE ;A/D DATA					
0015'	3E 0F		LD	A,DEL						
0017'	3D	WAIT:	DEC	A	;WAIT 50 µsec FOR THE					
0018'	C2 0013'		JP	NZ,WAIT	CONVERSION TO FINISH					
001B'	ED A2		INI	,	;STORE THE A/D'S DATA					
0015			EV		;CONVERTED ALL INPUTS?					
001D'	EB		EX	DE,HL						
001E'	C2 000E'		JP	NZ,STCONV	;IF NOT GOTO STCONV					


END


Note 14: This routine sequentially programs the MUX data latch in the signal-ended mode. For CH1-CH8 a conversion is started, then a 50 µs wait for the A/D to complete a conversion and the data is stored at address ADDTA for CH1, ADDTA + 1 for CH2, etc.



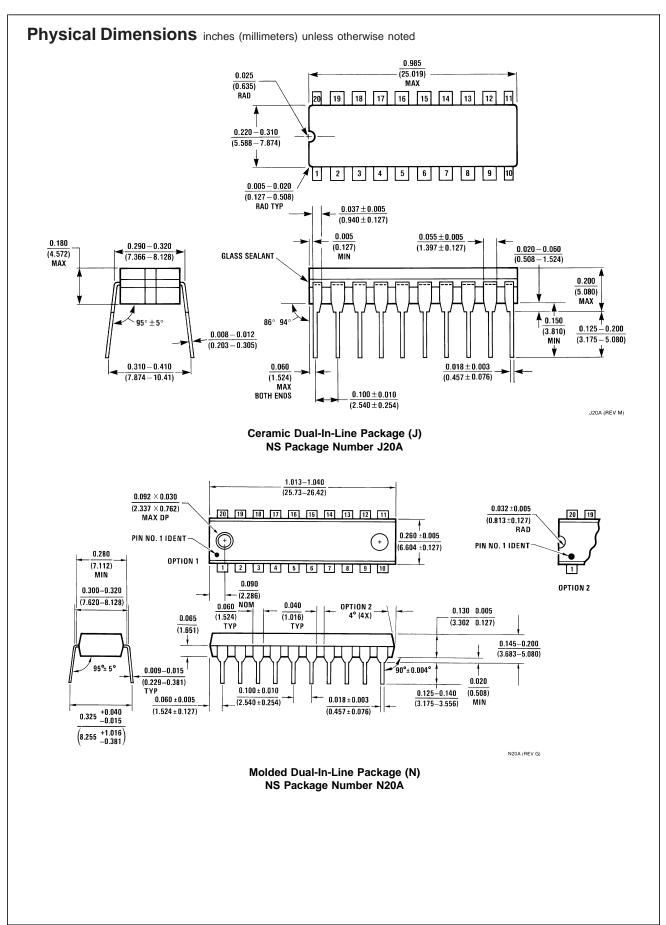



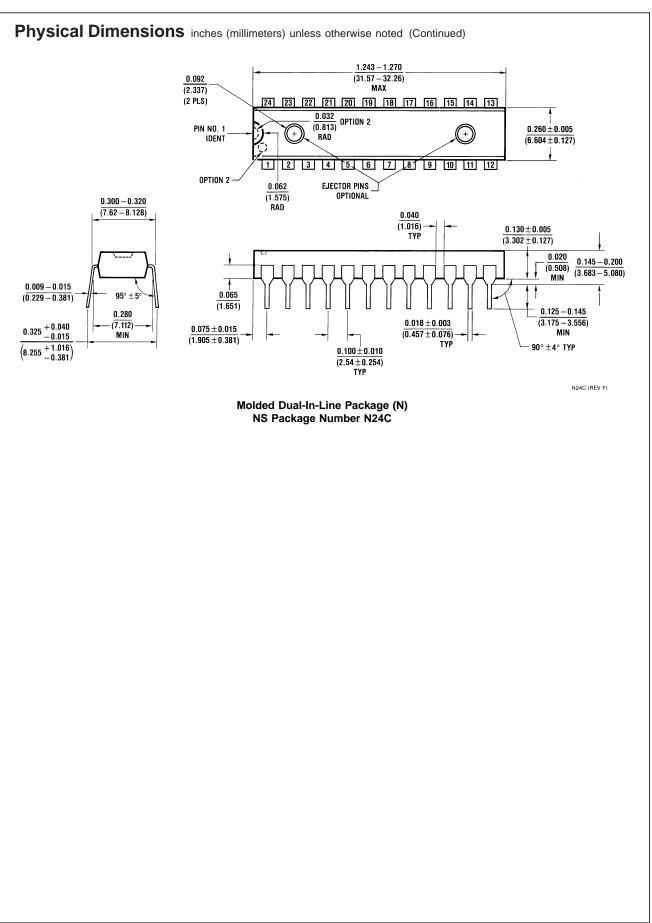

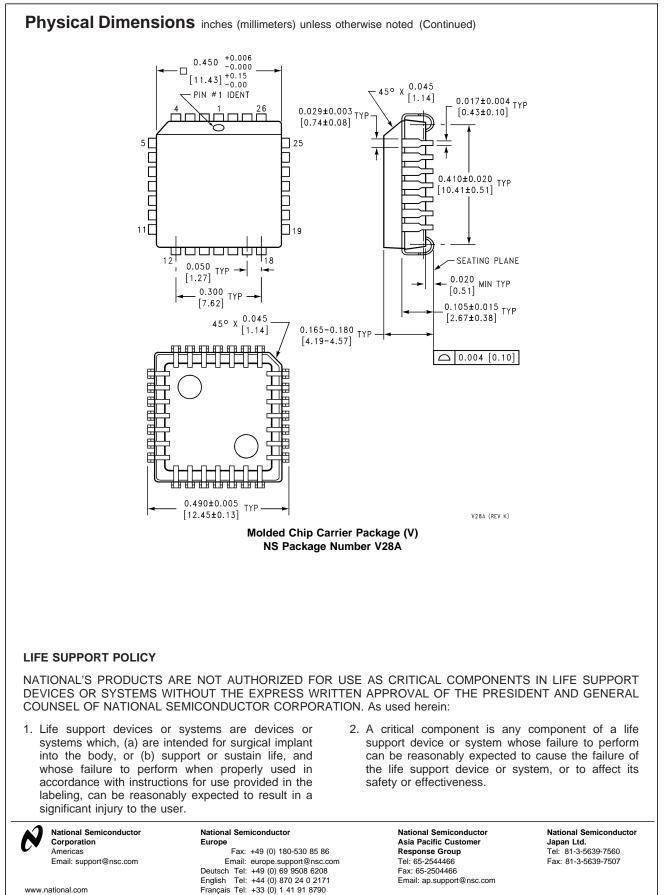

National does not assume any responsibility for use of any circuitry described, no circuit patent licenses are implied and National reserves the right at any time without notice to change said circuitry and specifications.